



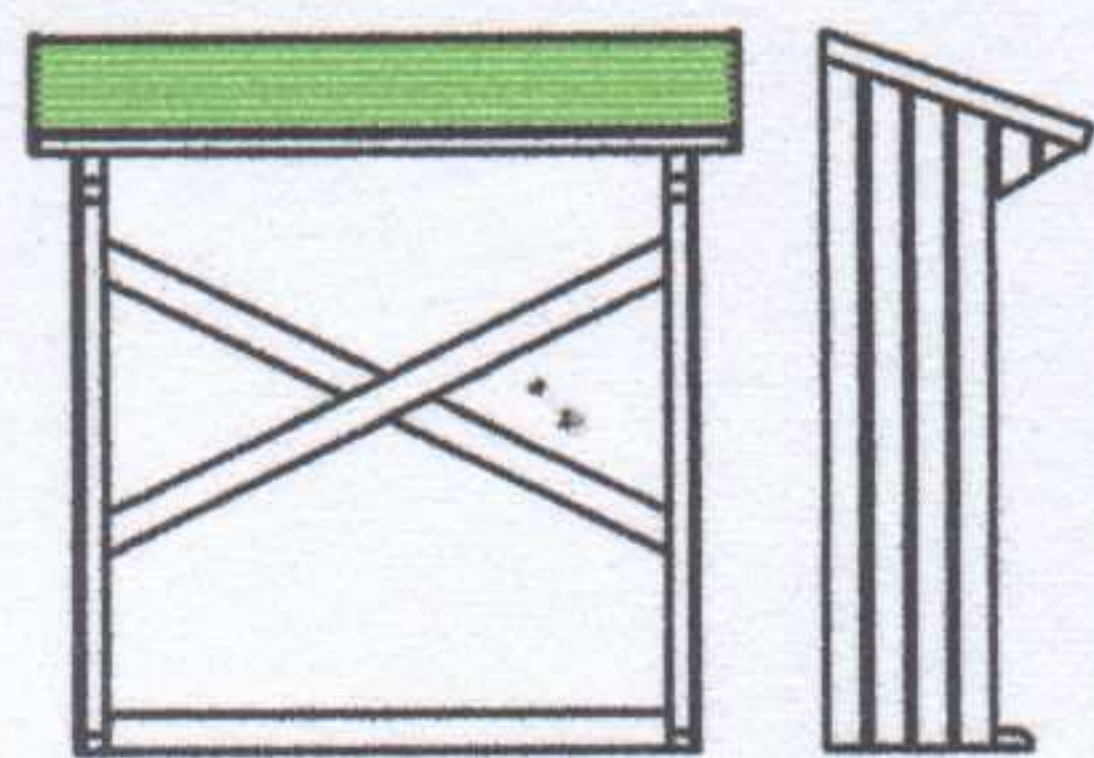


PLP 1137

(3,5x40) -26st

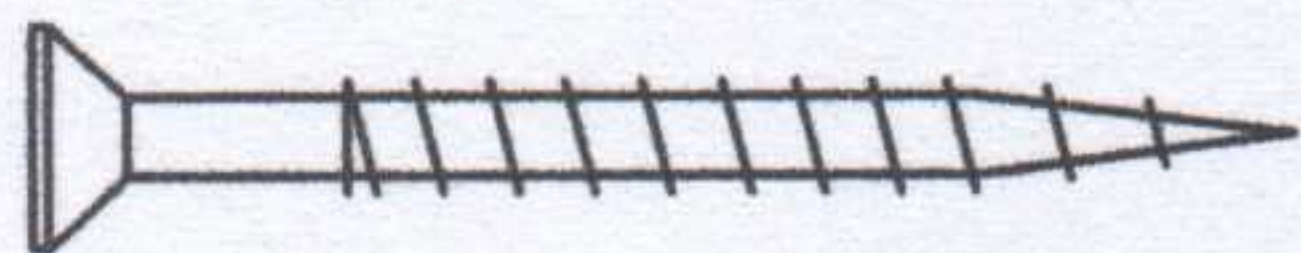


-1st

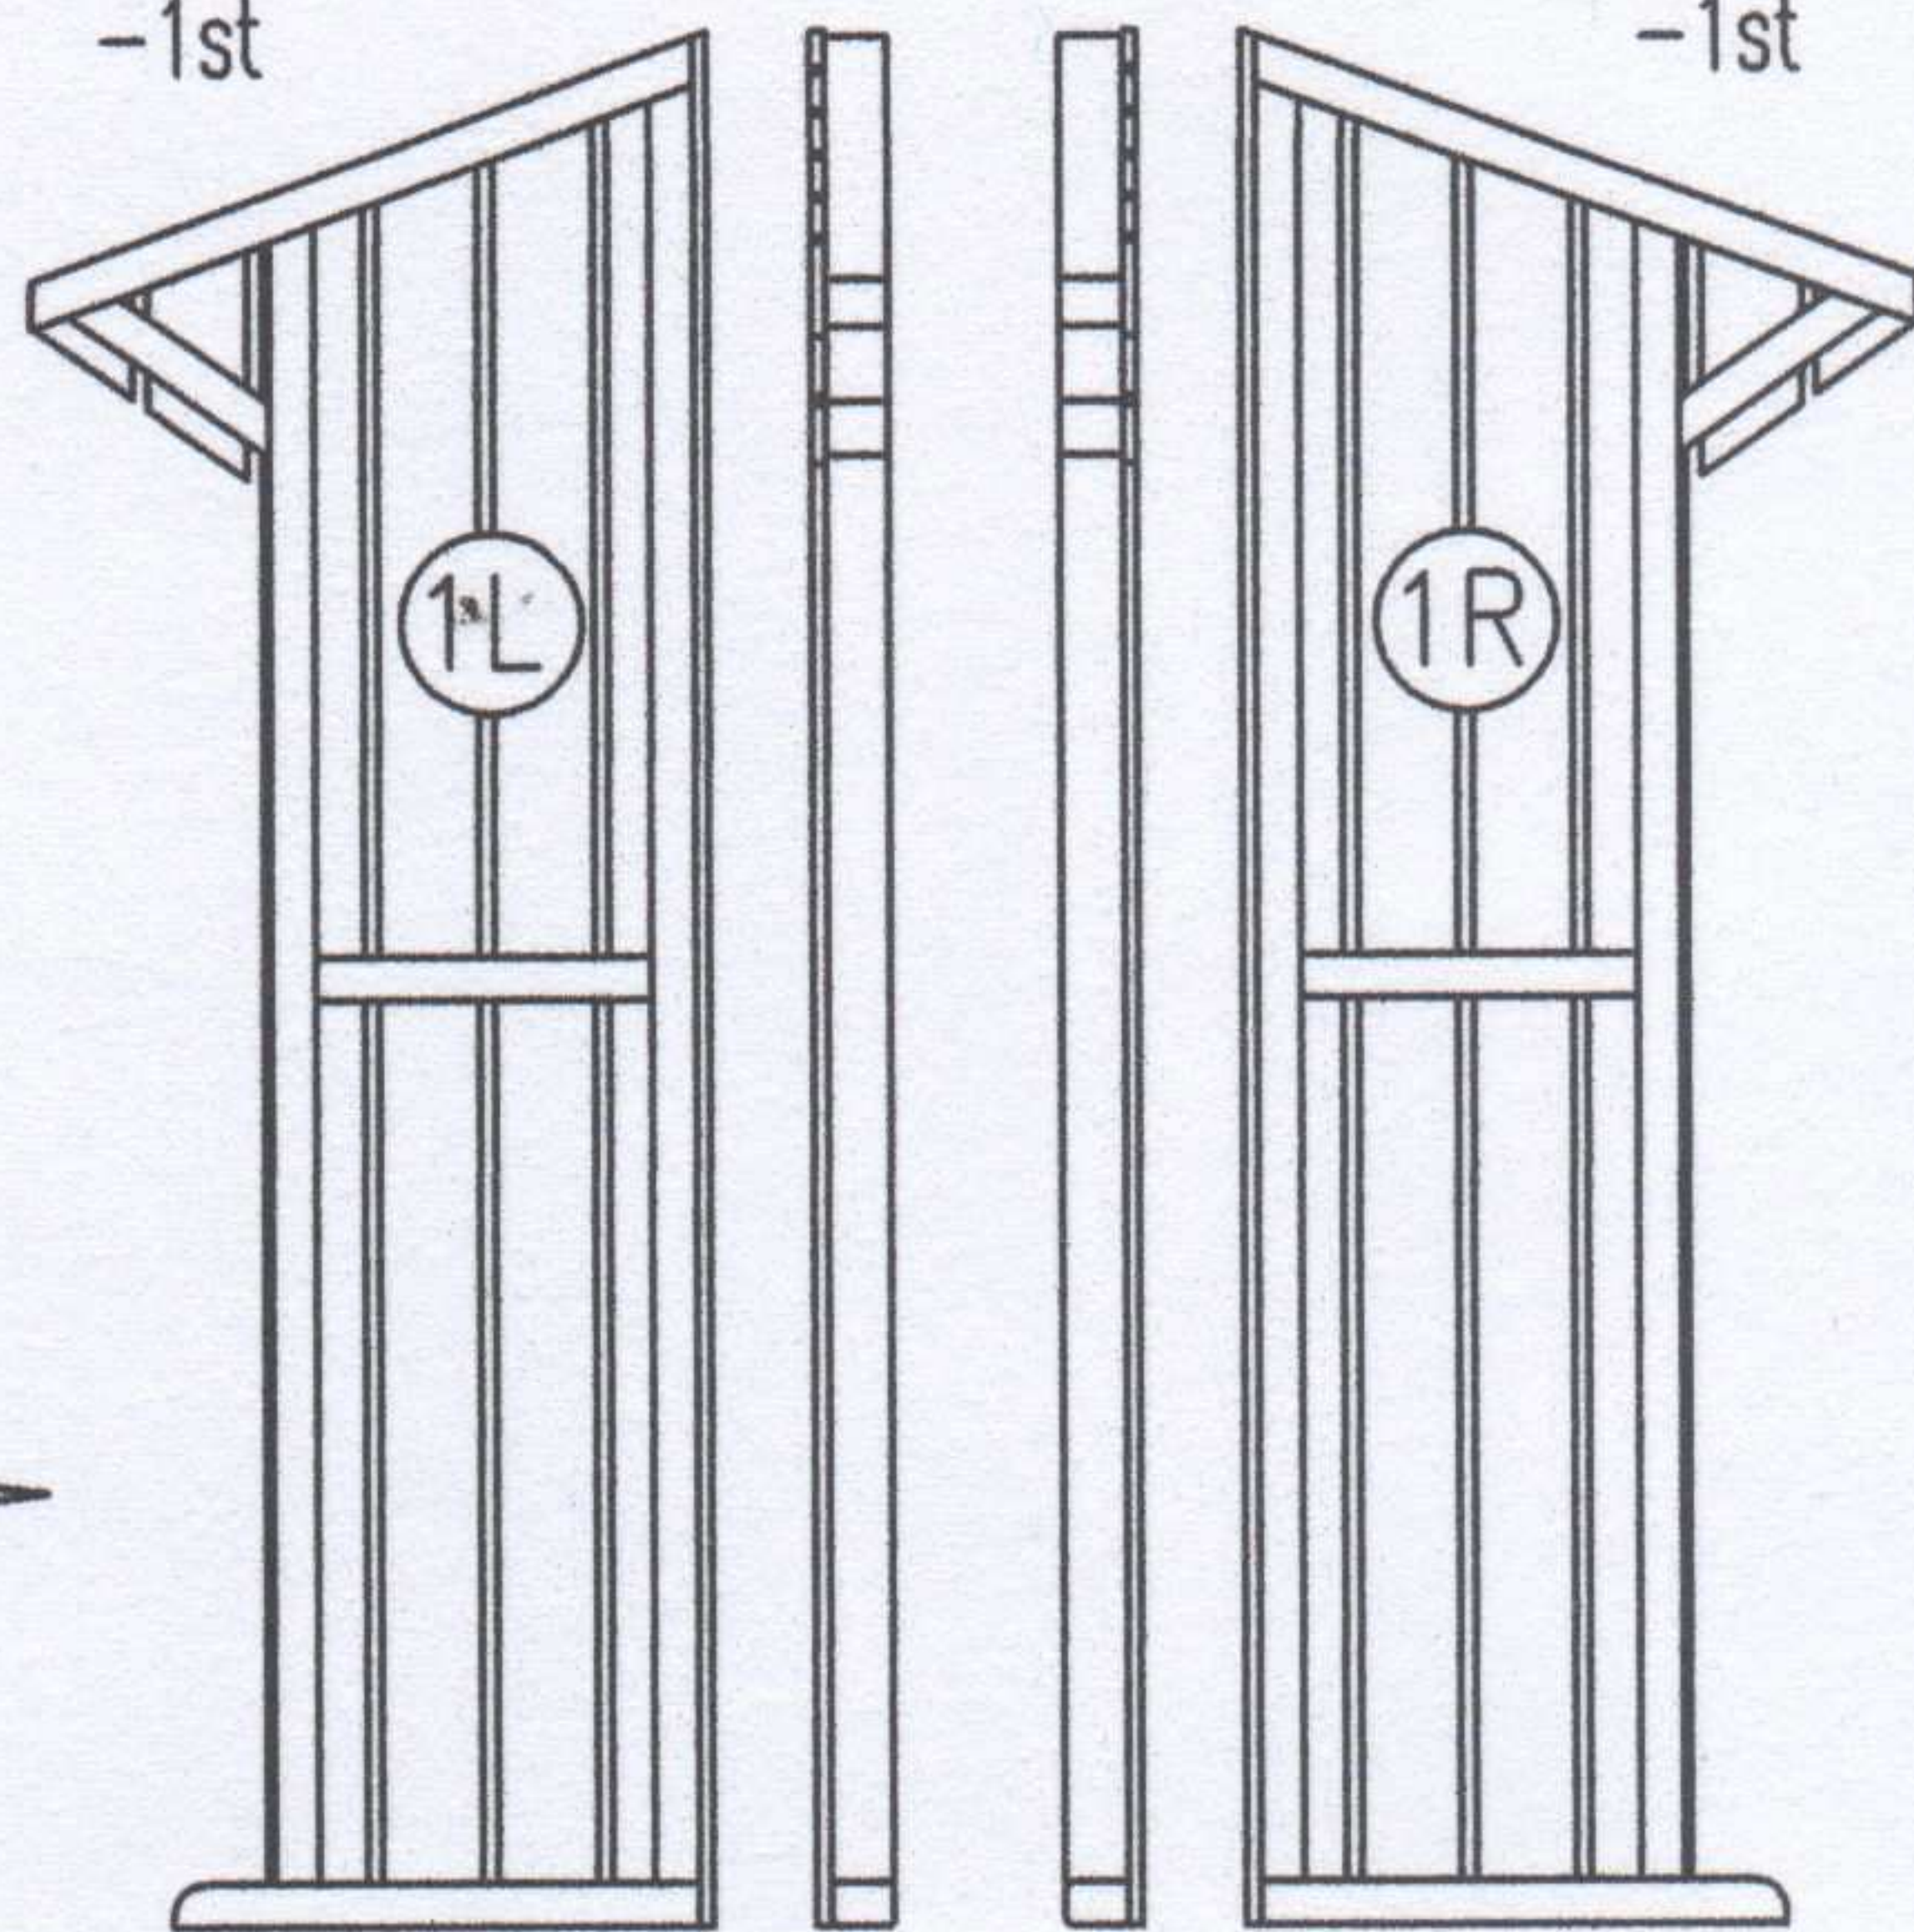


-1st


-2st

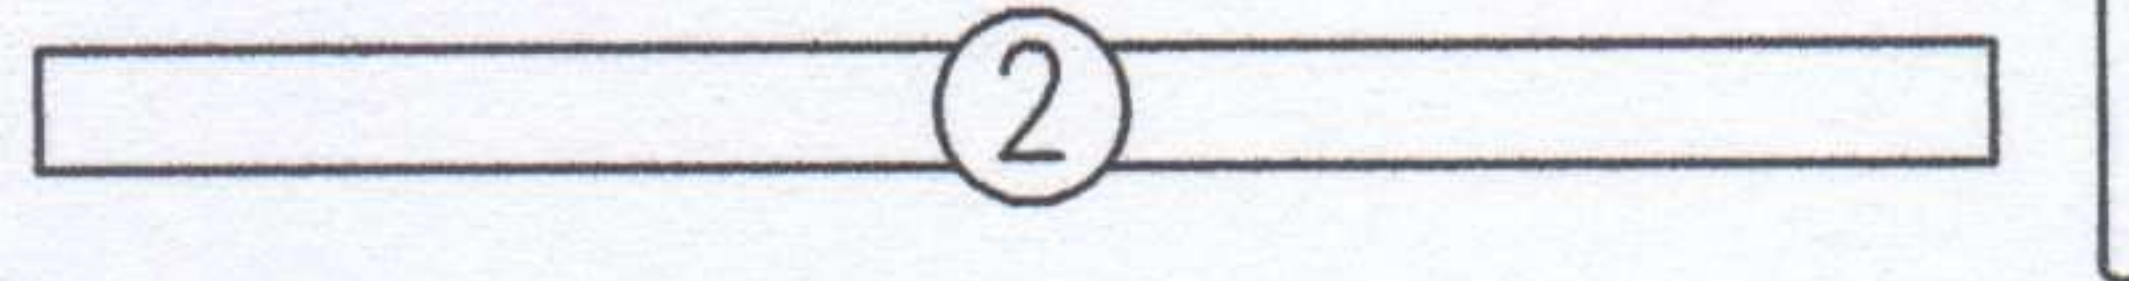


-2st

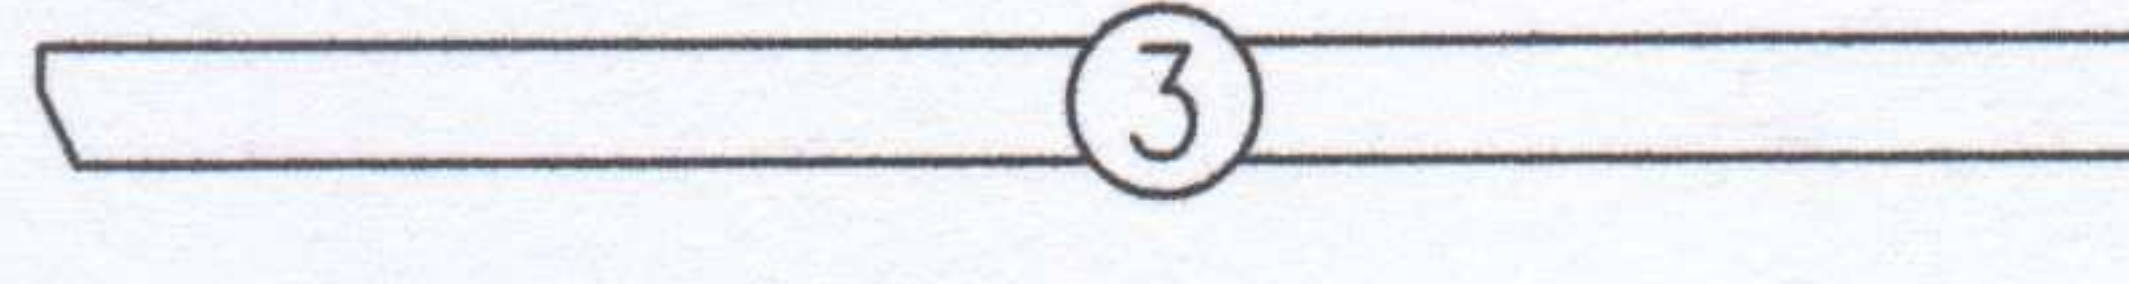


-1st

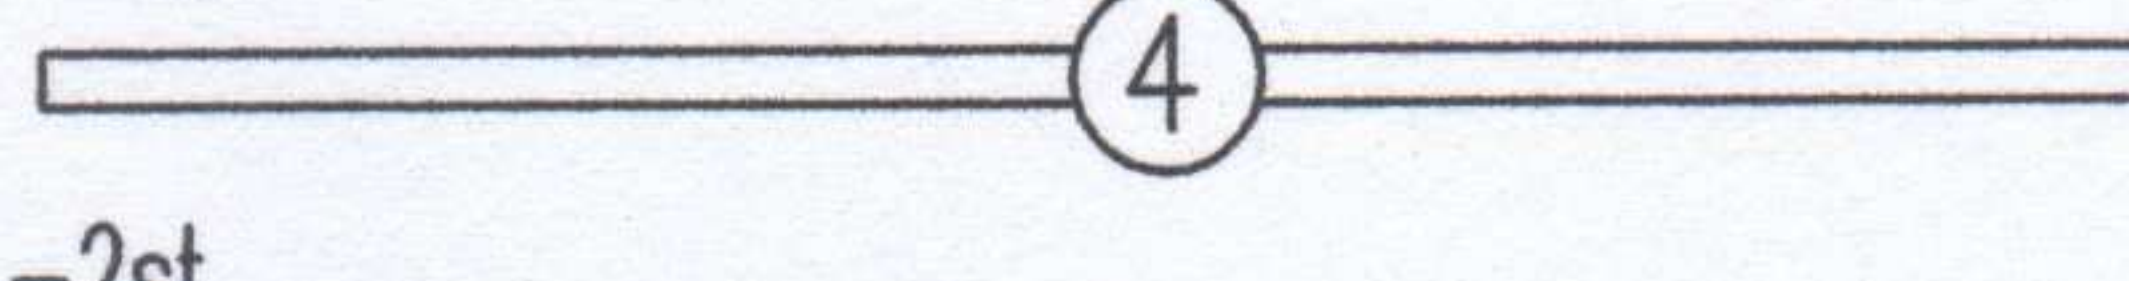













-2st

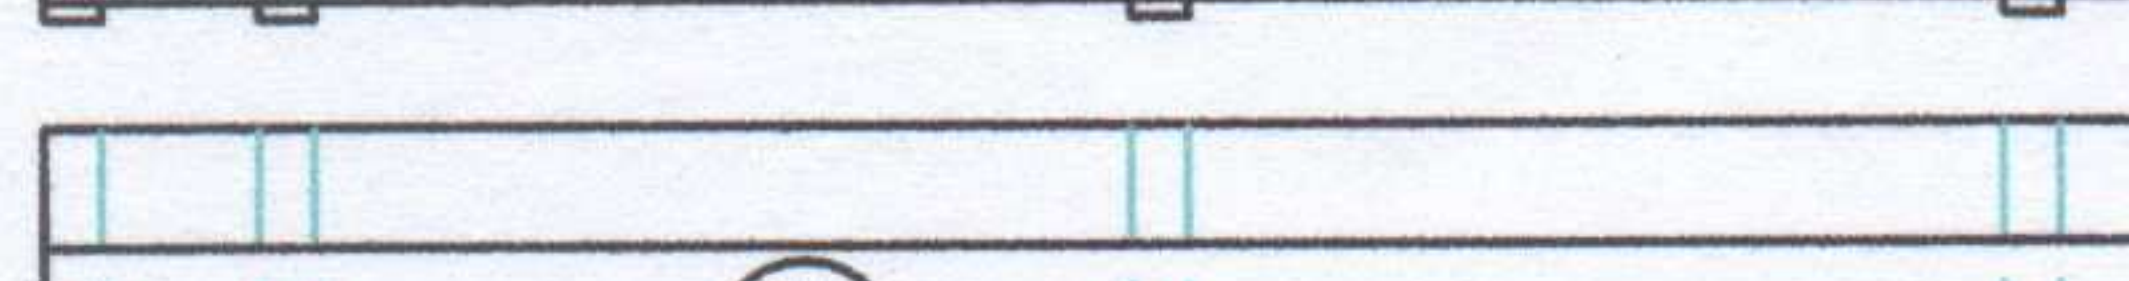

-2st

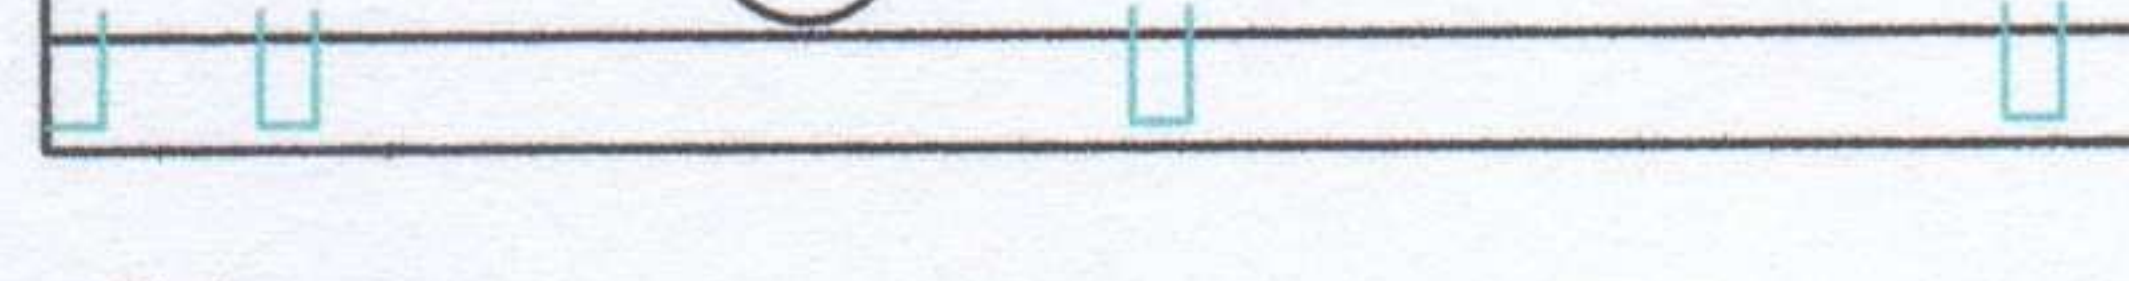

-2st

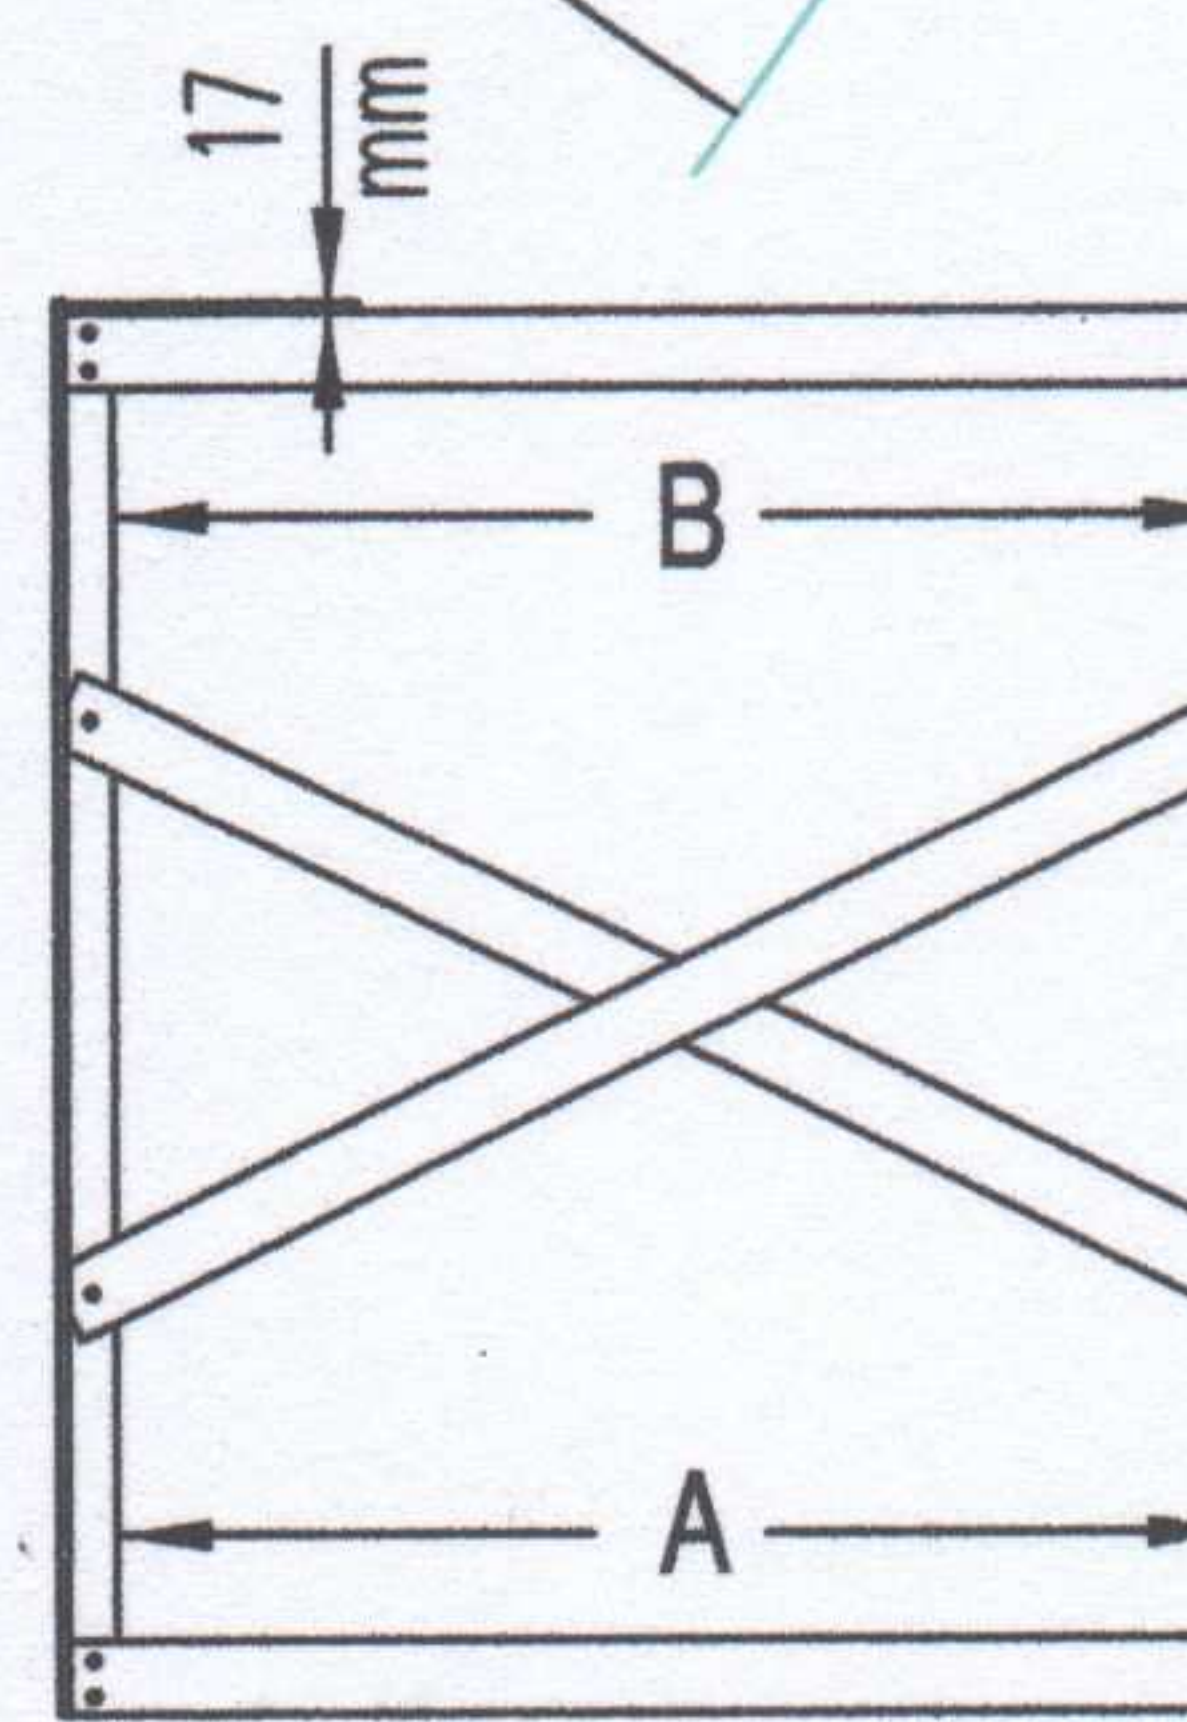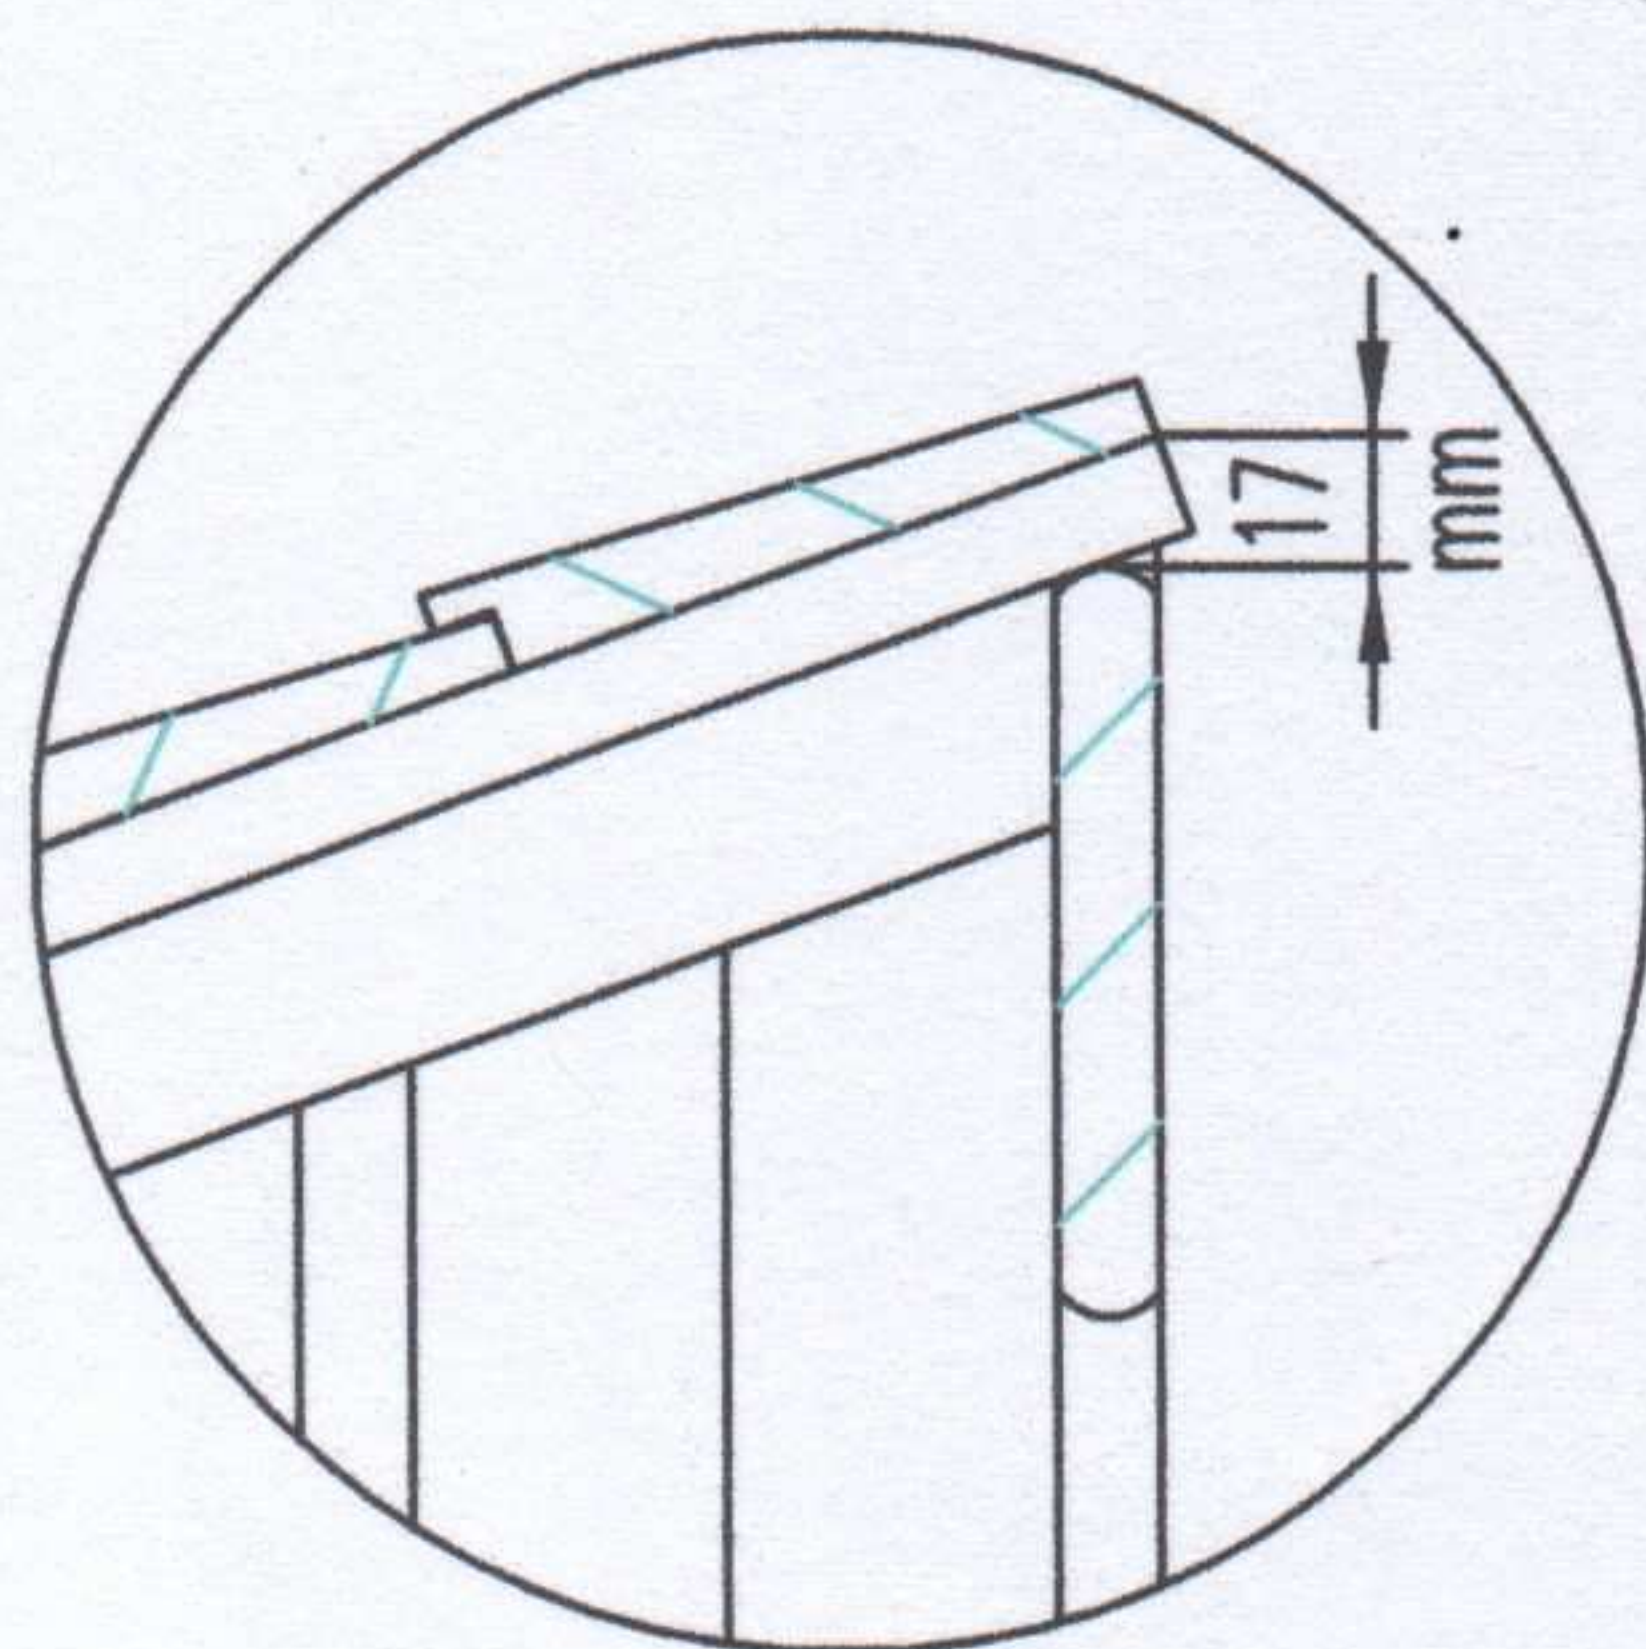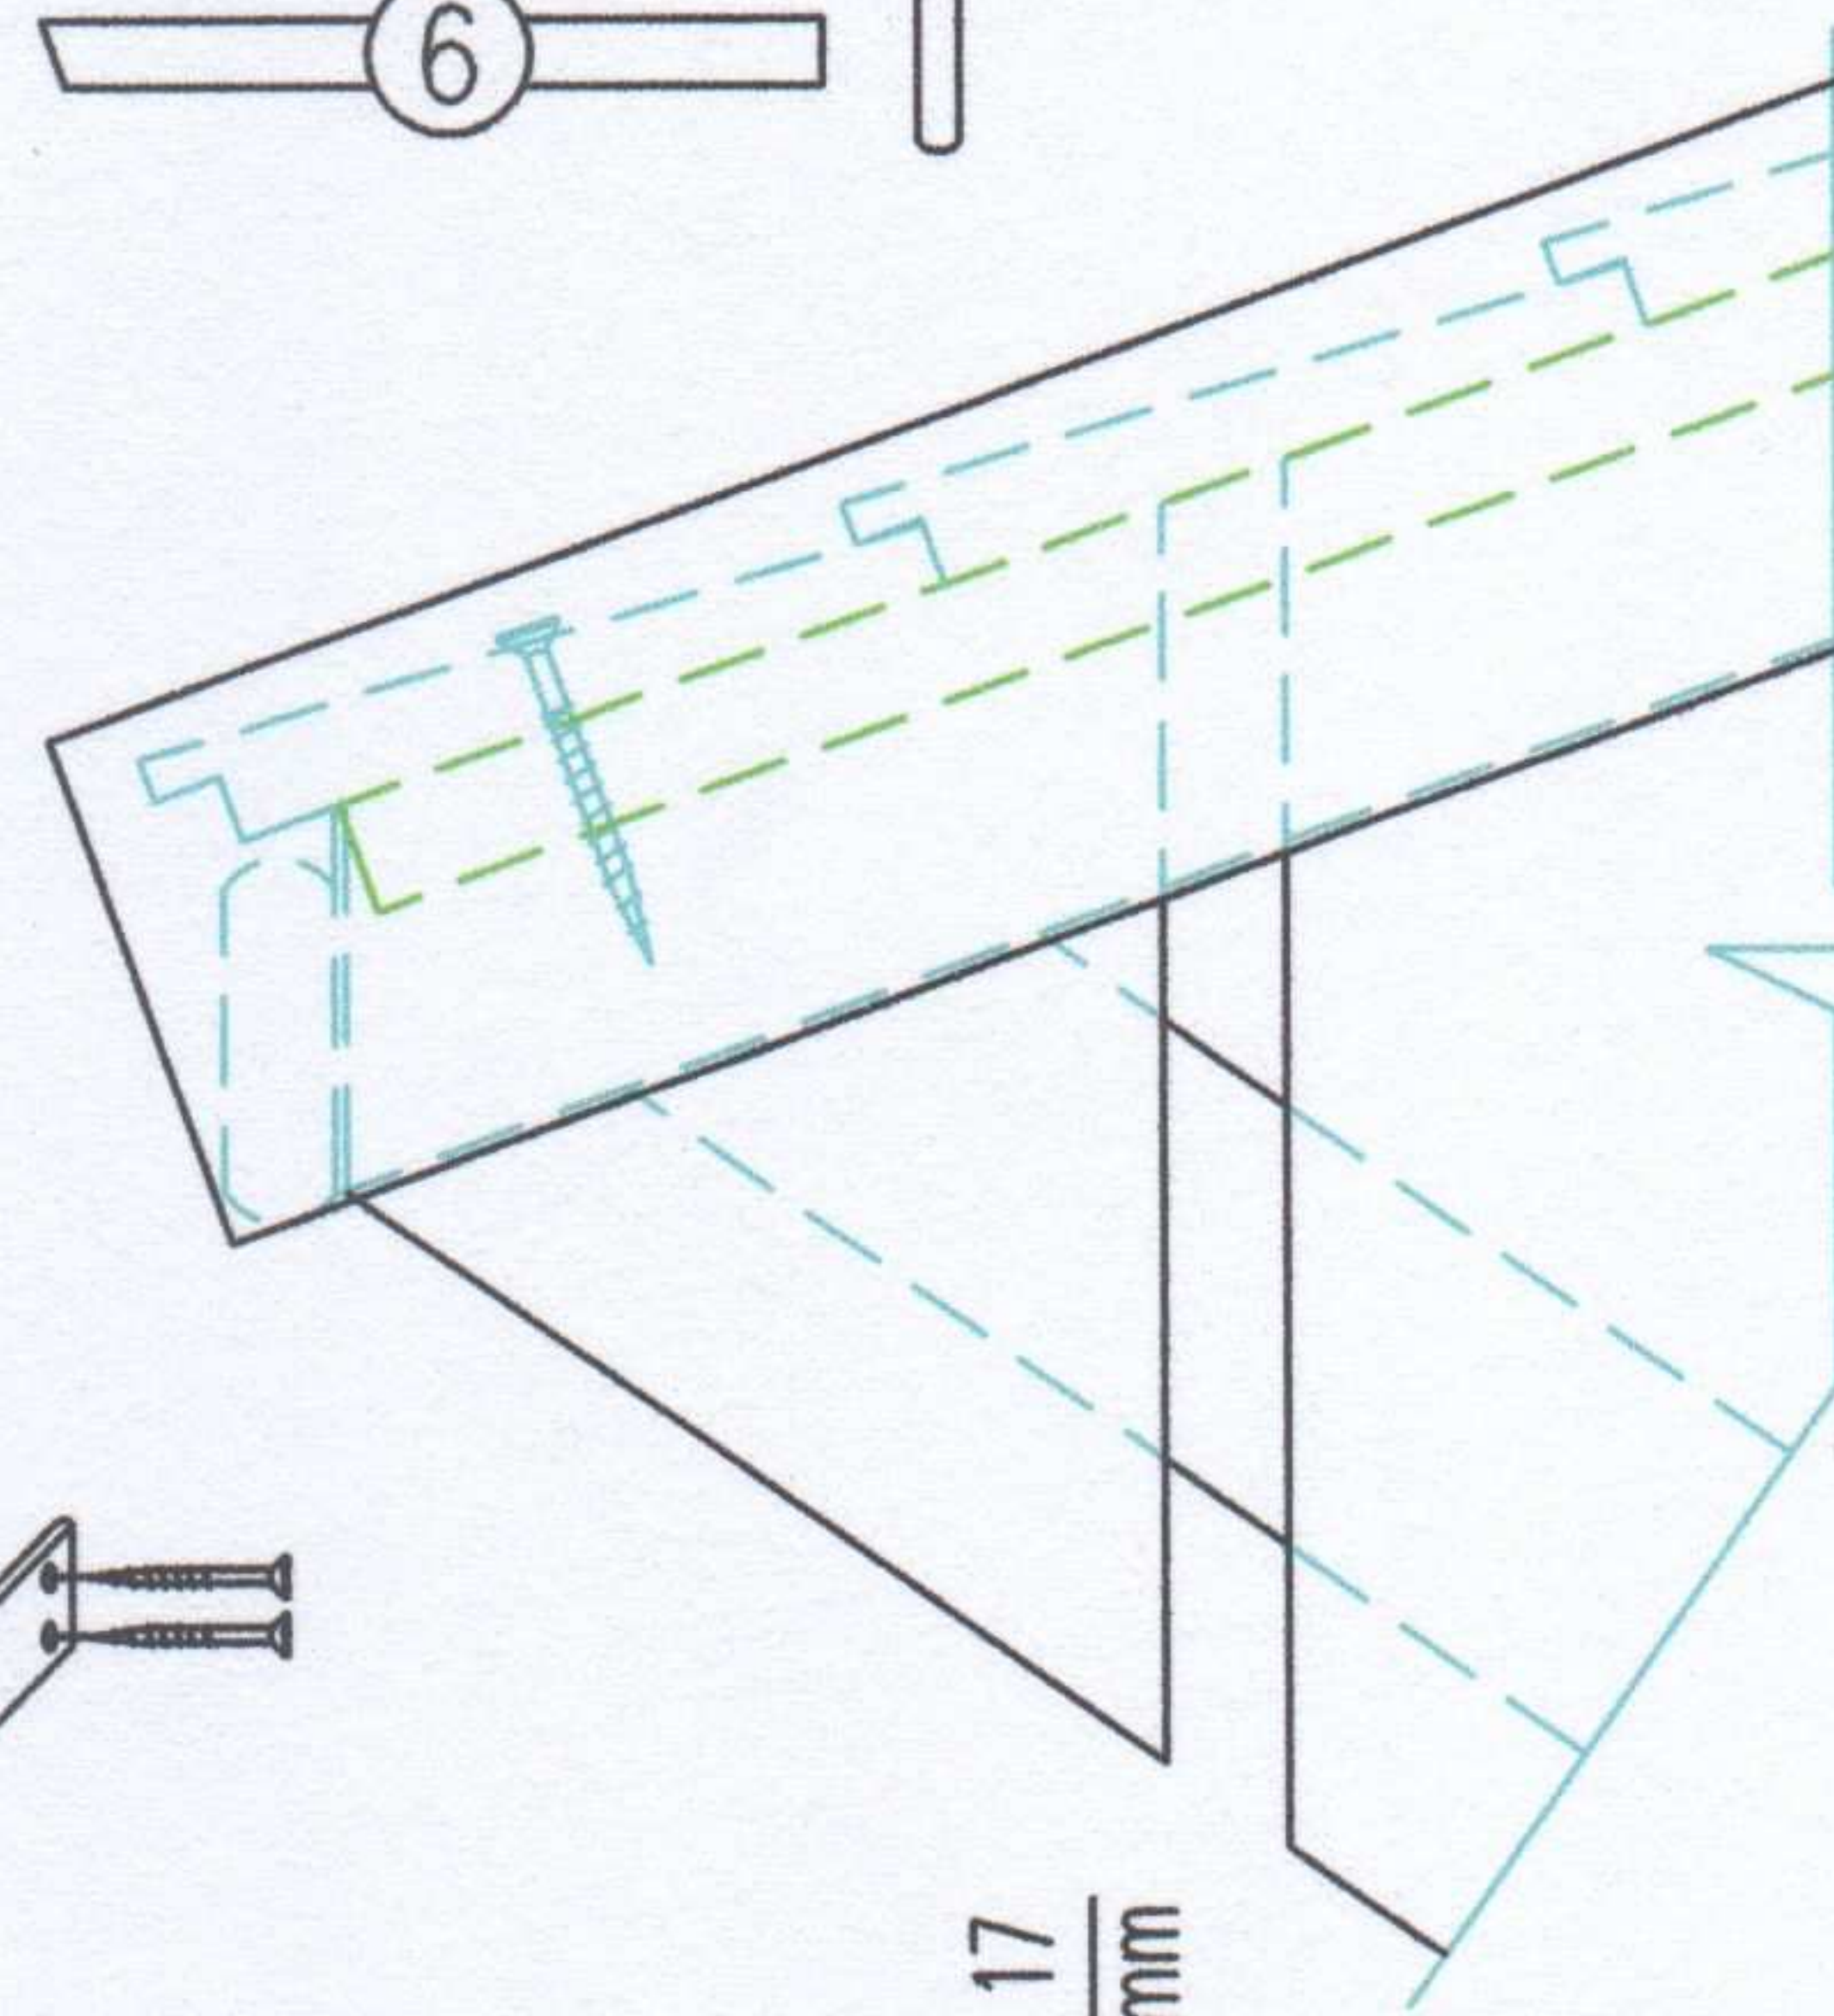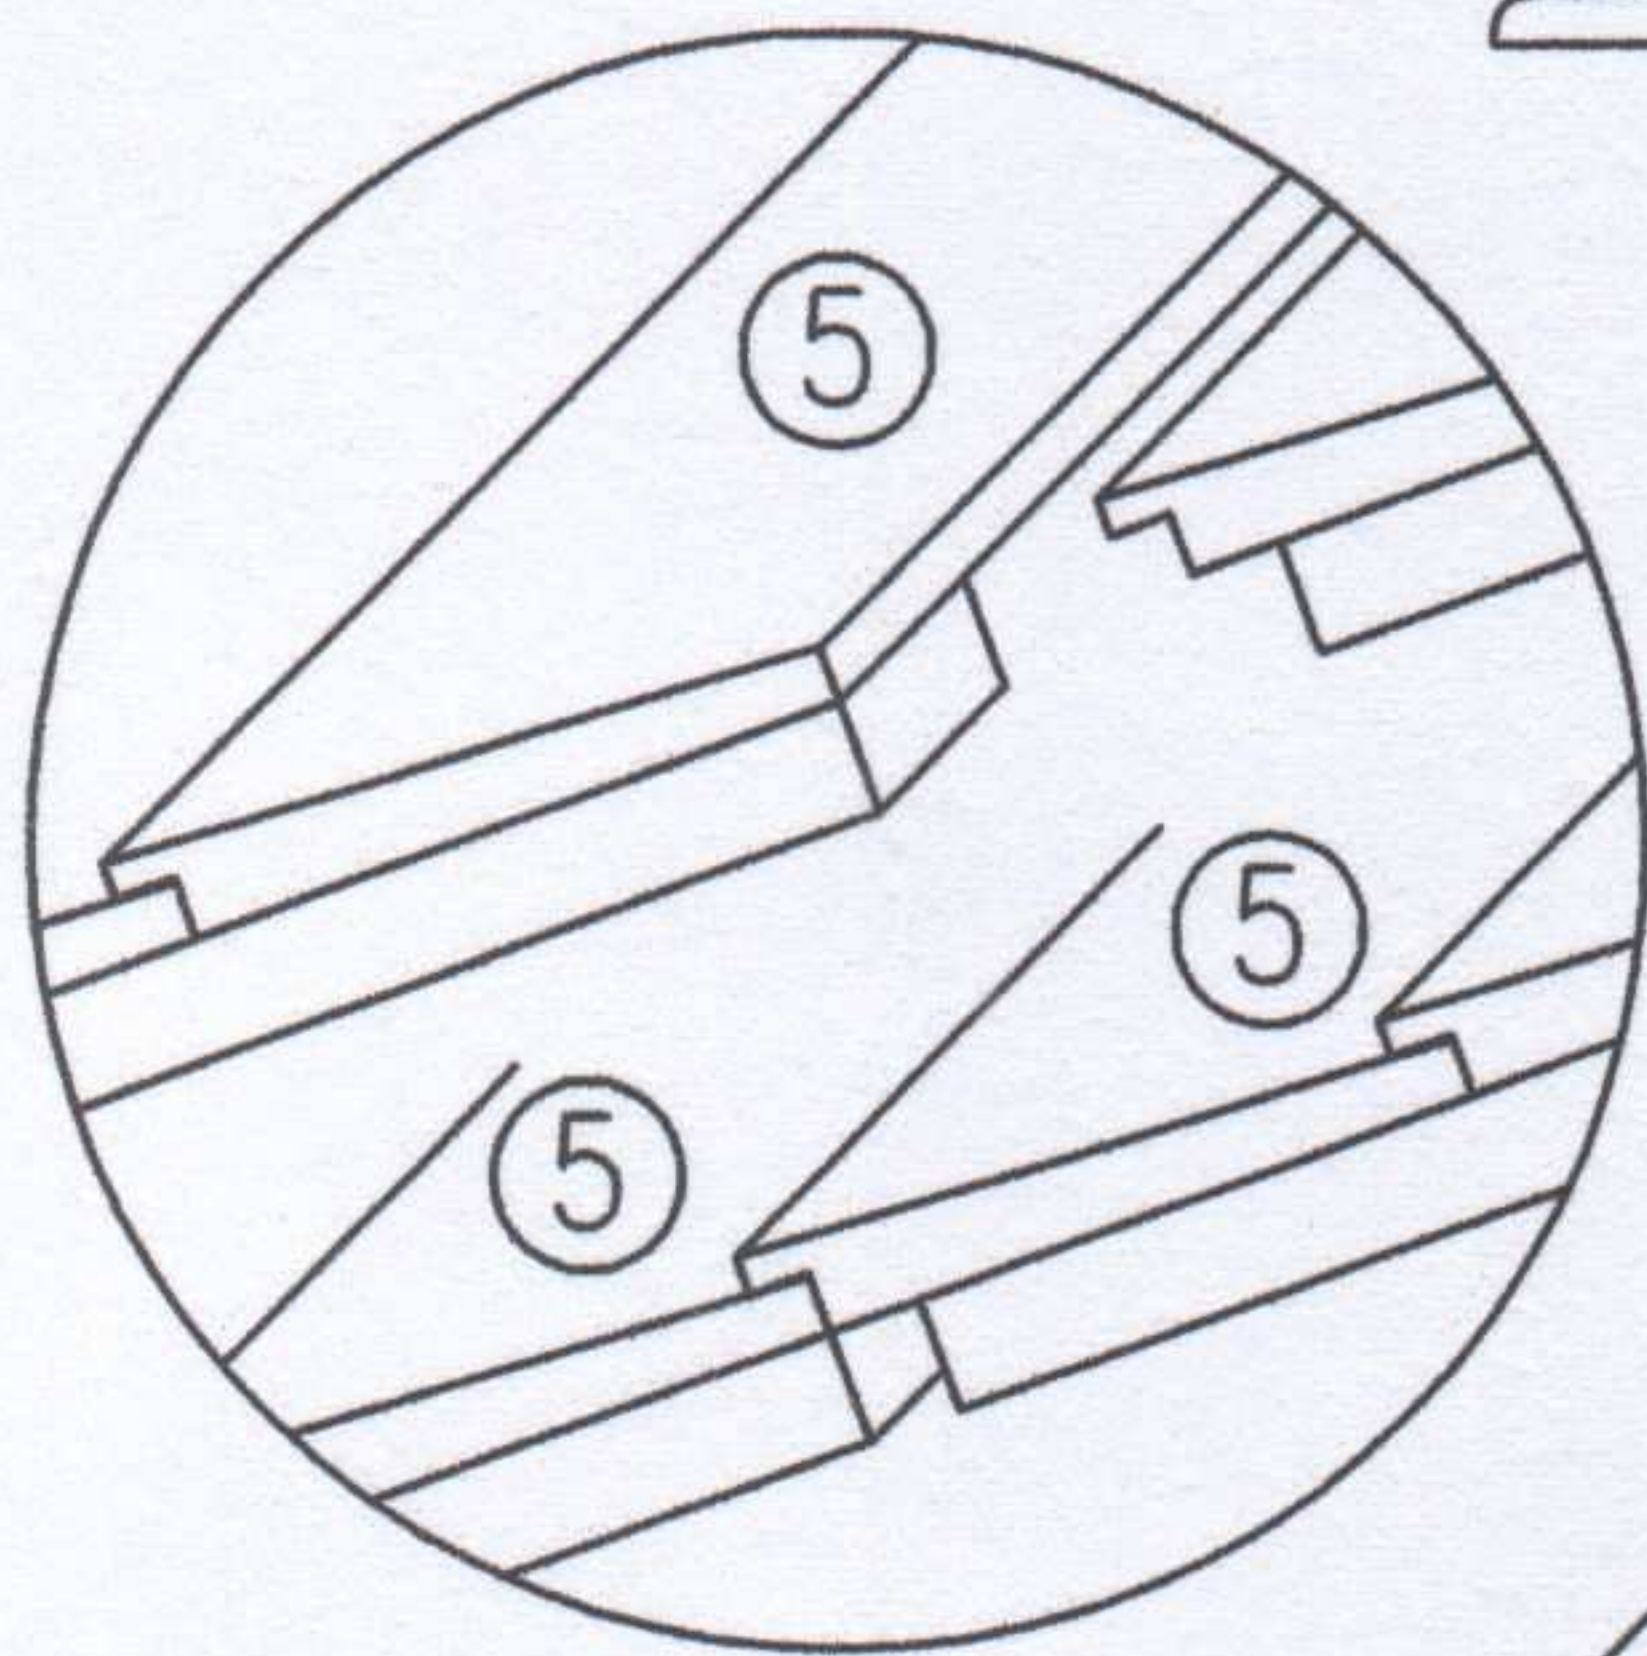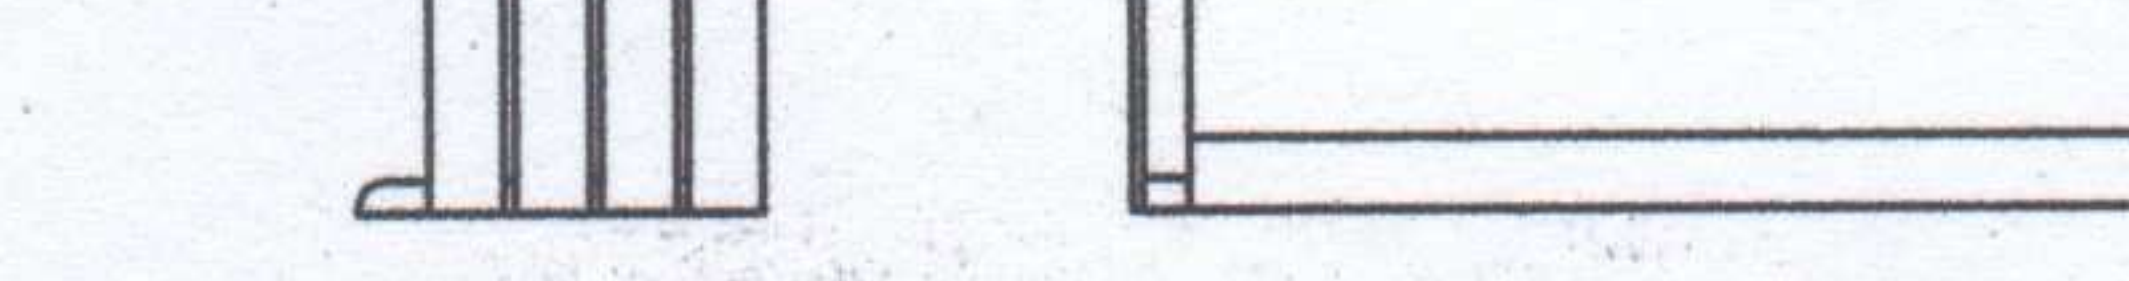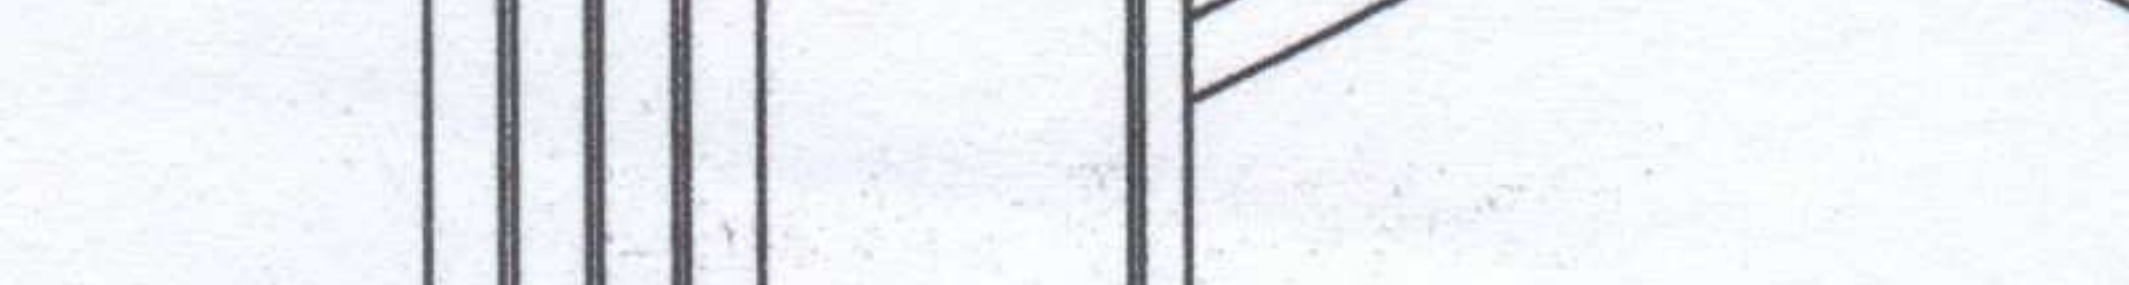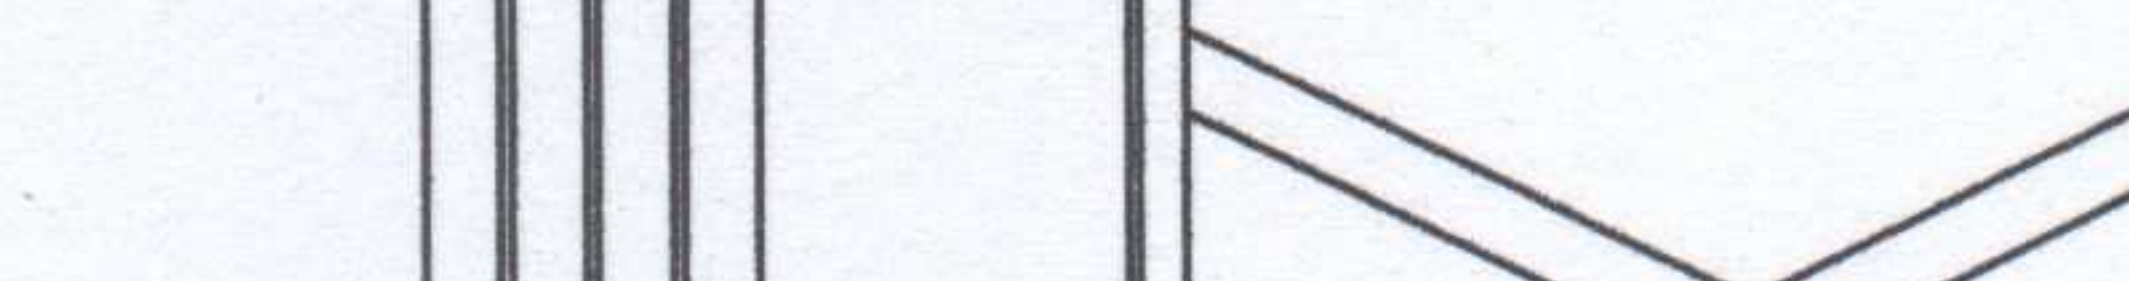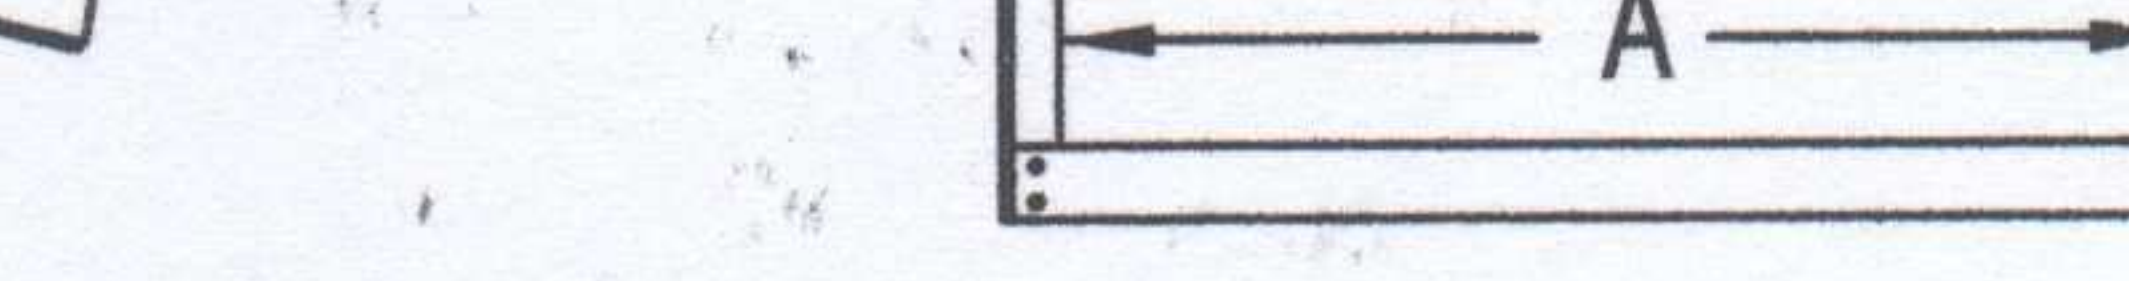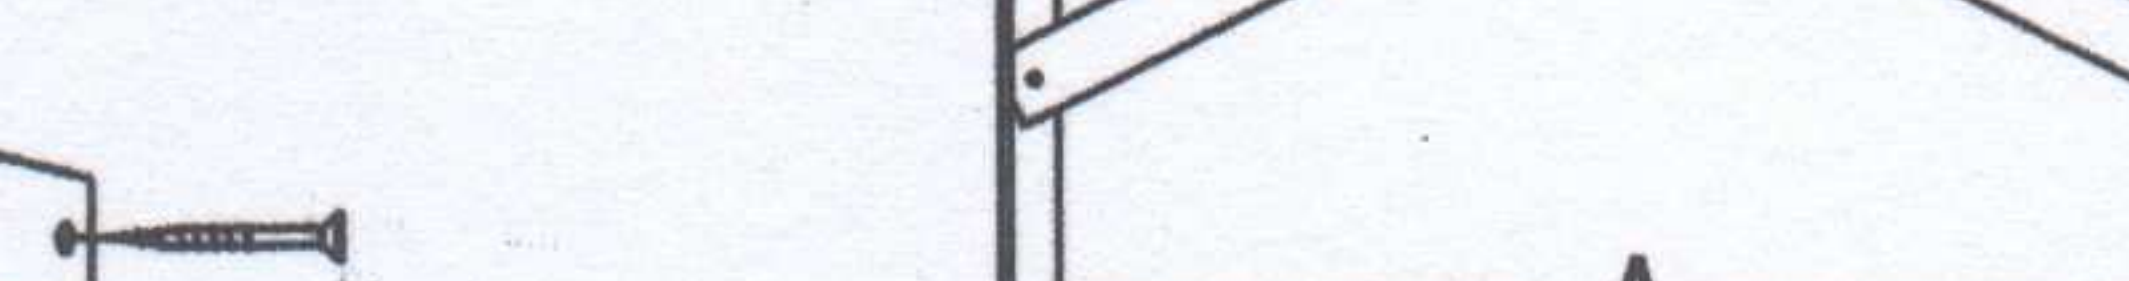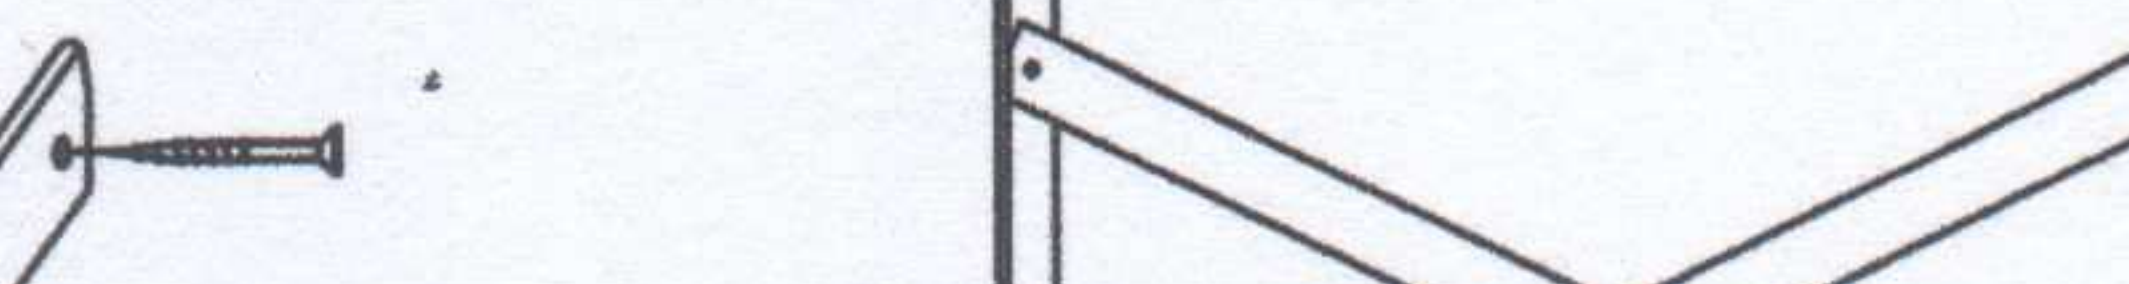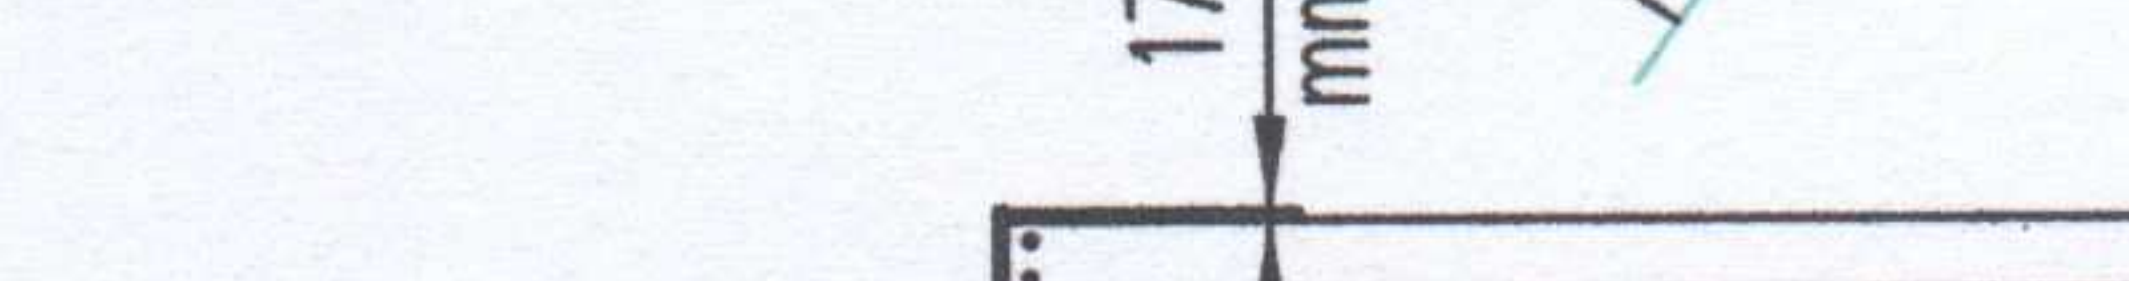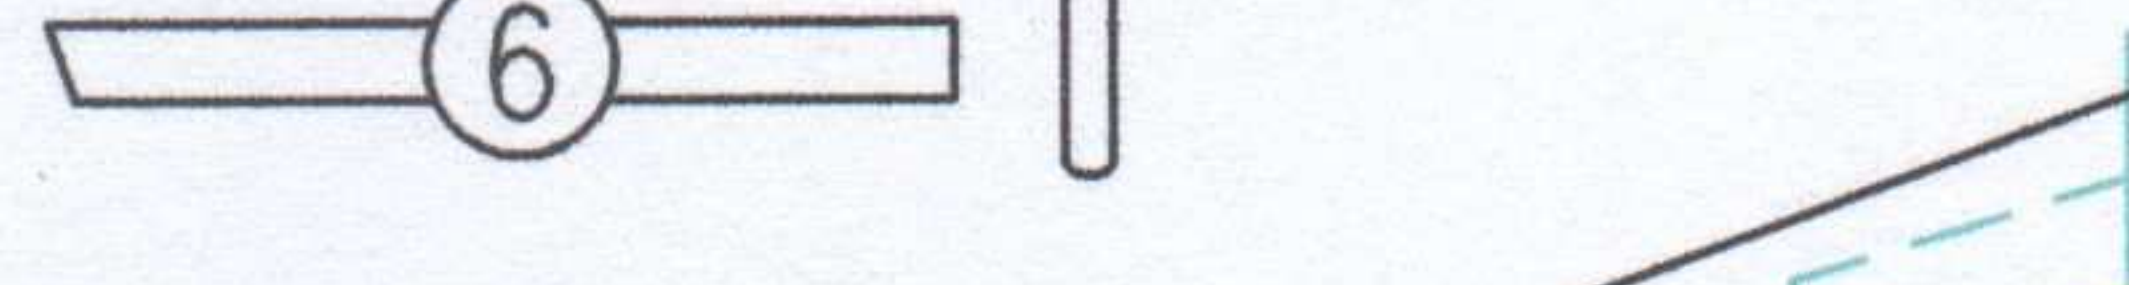

17 mm

B

A

A=B

PLP 1137 (27.07.2011)

P.0009/M.0013/JC

(S)

Vi rekommenderar förboring av skruvhålen!

(NL)

Voor alle schroeven adviseren wij de gaten voor te boren!

(D)

Vor dem Schraubeneindrehen soll man die Löcher boren!

(UK)

For all screws we advise to pre-bore the holes!

(F)

Pour toutes les vis nous vous recommandons de percer les trous!