





Benodigde gereedschappen.

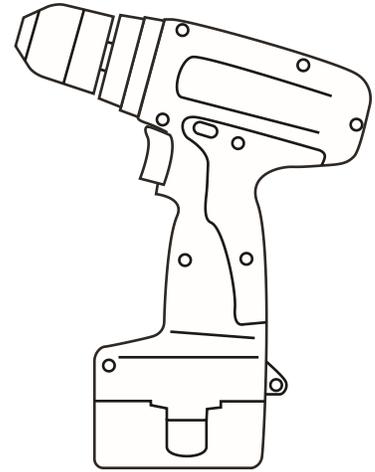

1x

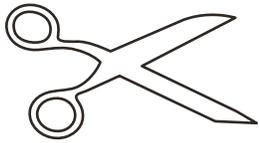


2x



2x



4x




2x




2x



2x

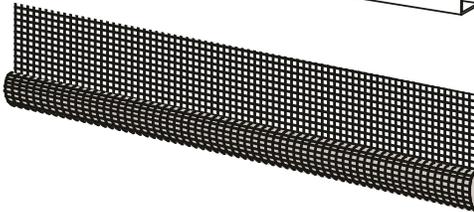


1x

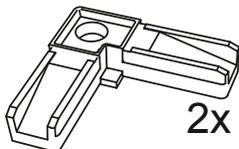


HDB501

2x

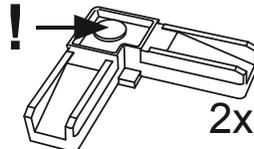

HDB506

2x




1x



14x

3,5x16

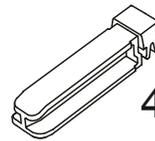


4x

RHZ502



4x

3,5x13

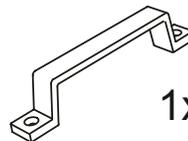


1x

HDP301




2x

HDB661

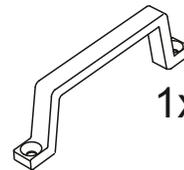

1x

RHZ522

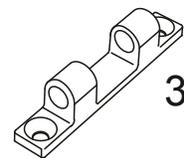


3x

RHZ551






3x



RHZ553




3x

RHZ552

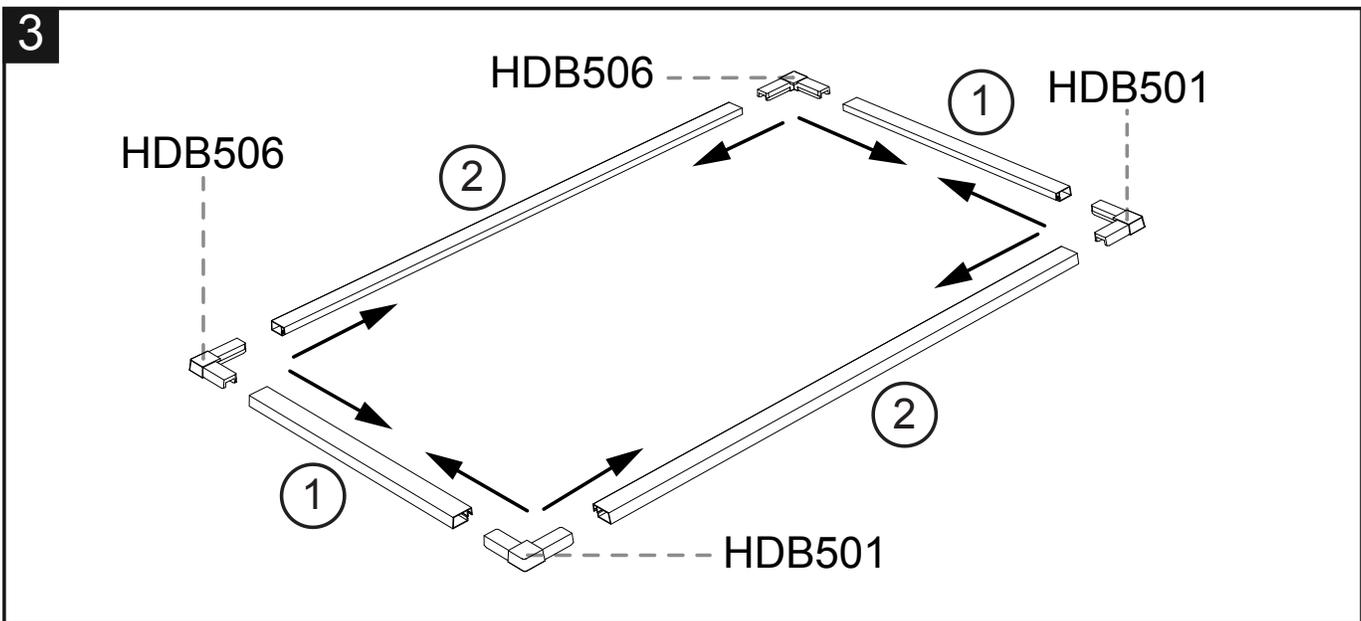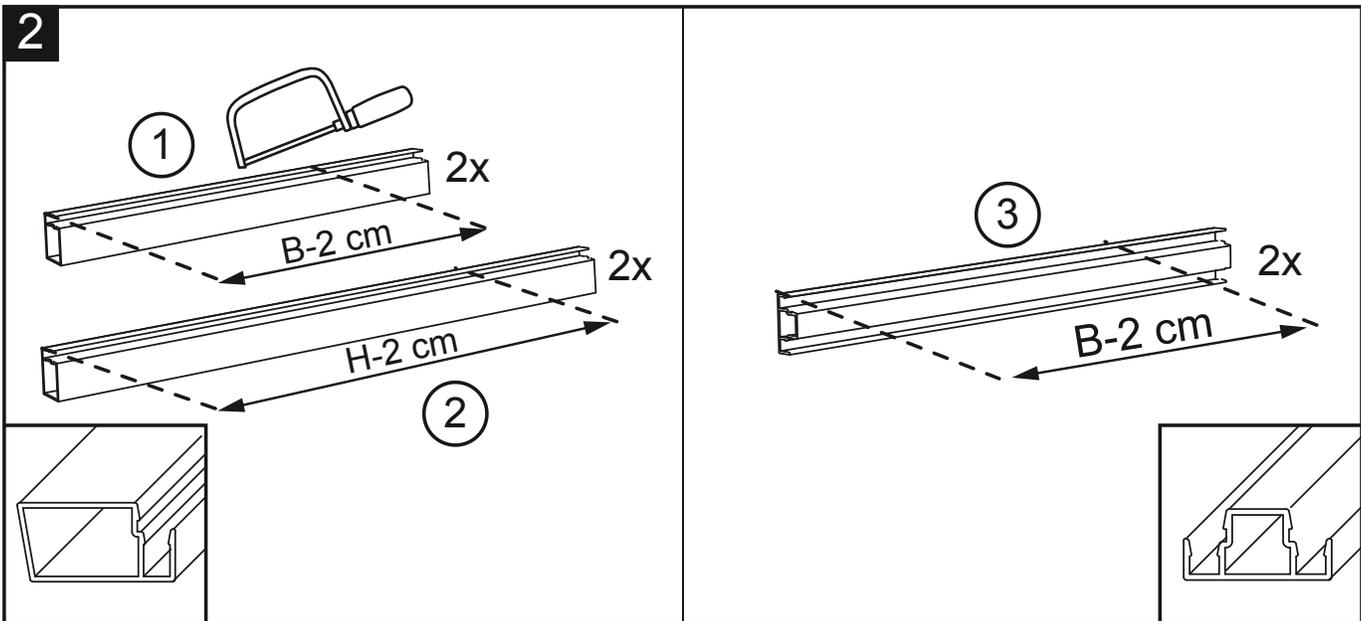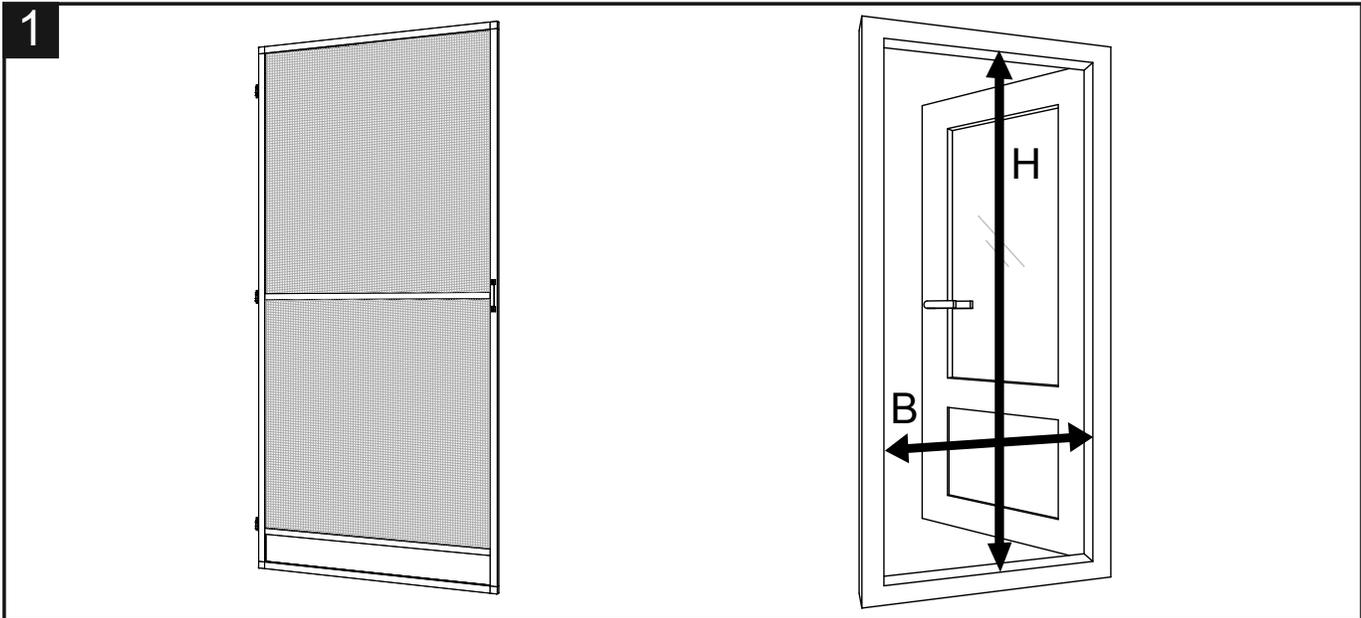


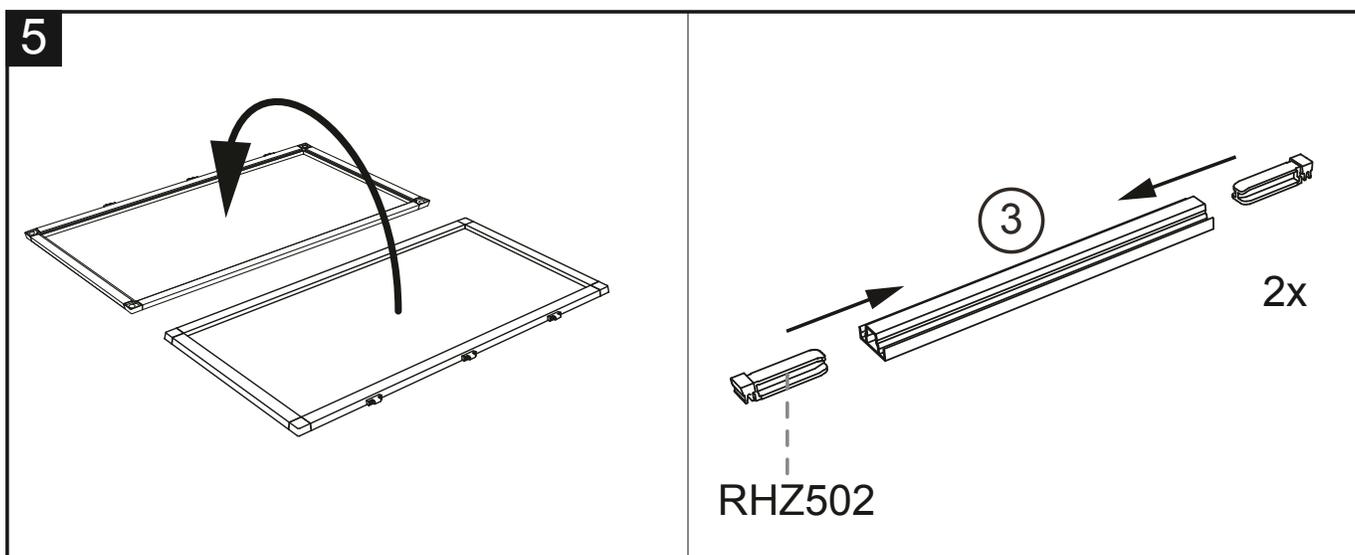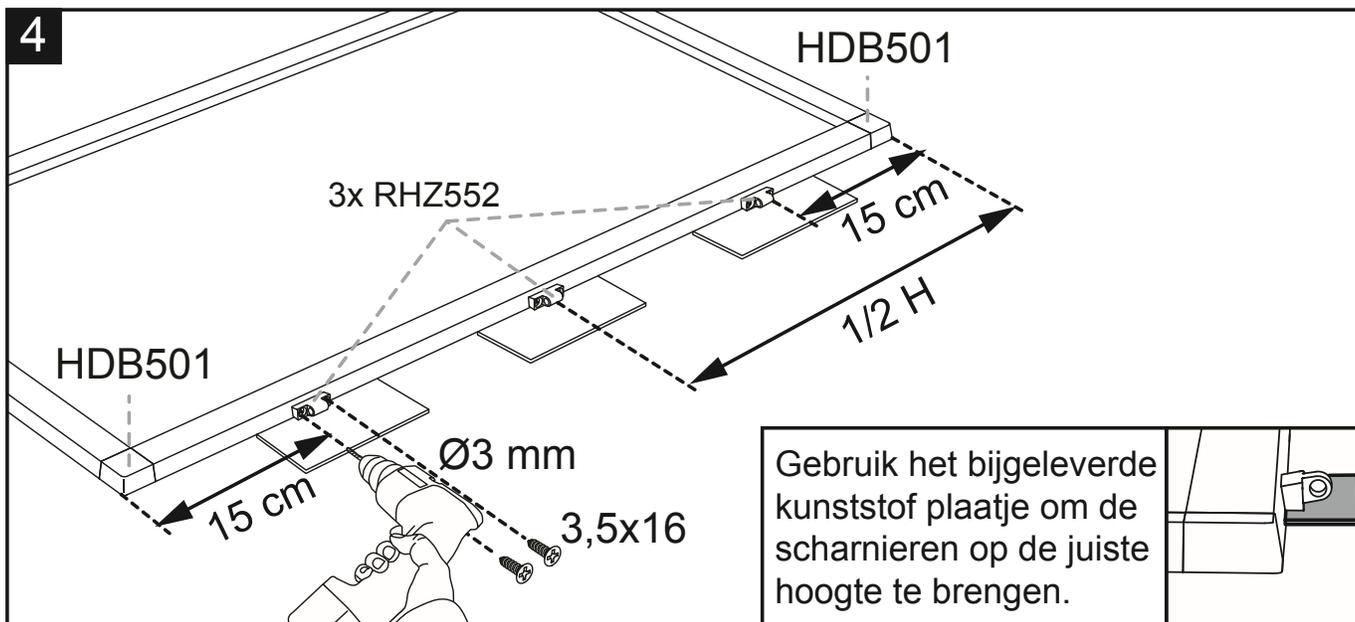


Draai het frame om en bevestig RHZ502 op beide kanten van profiel 3.

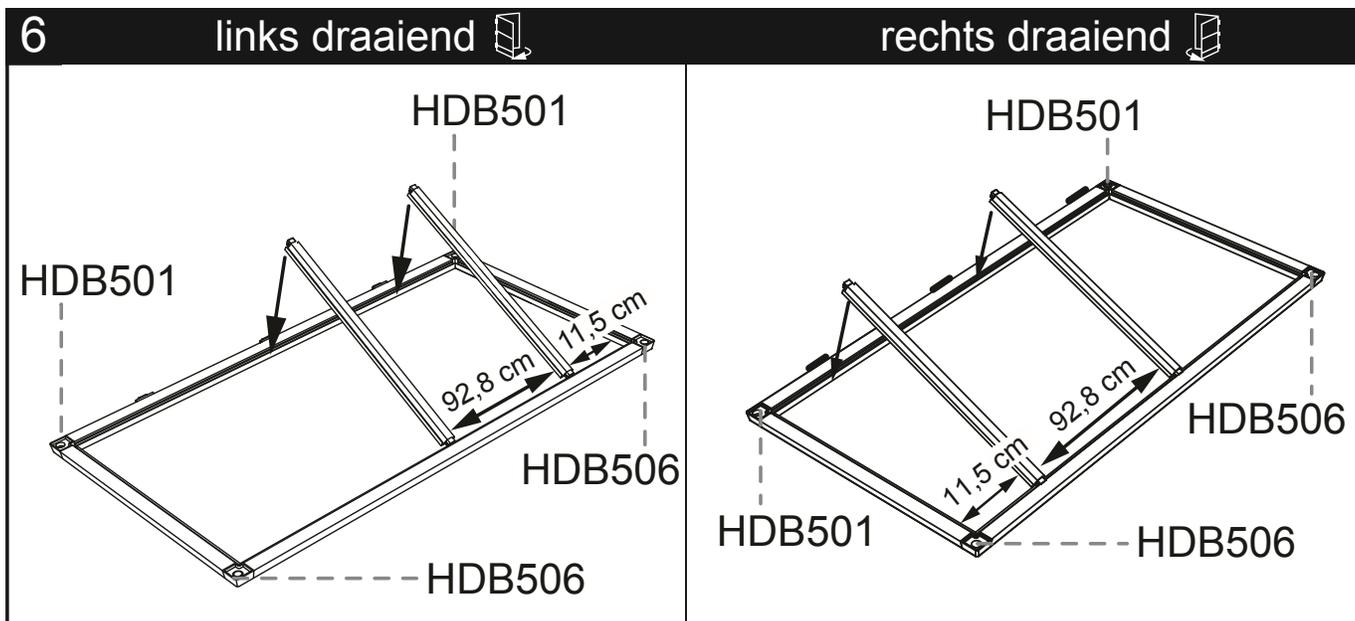


7

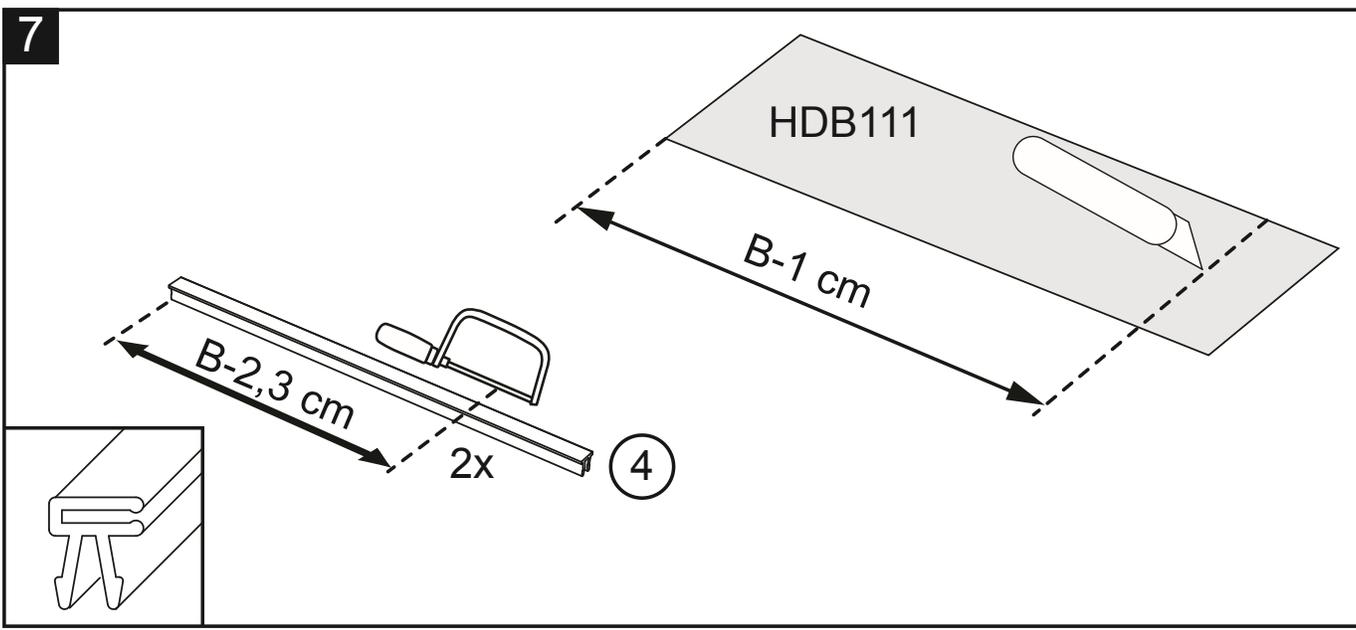


8

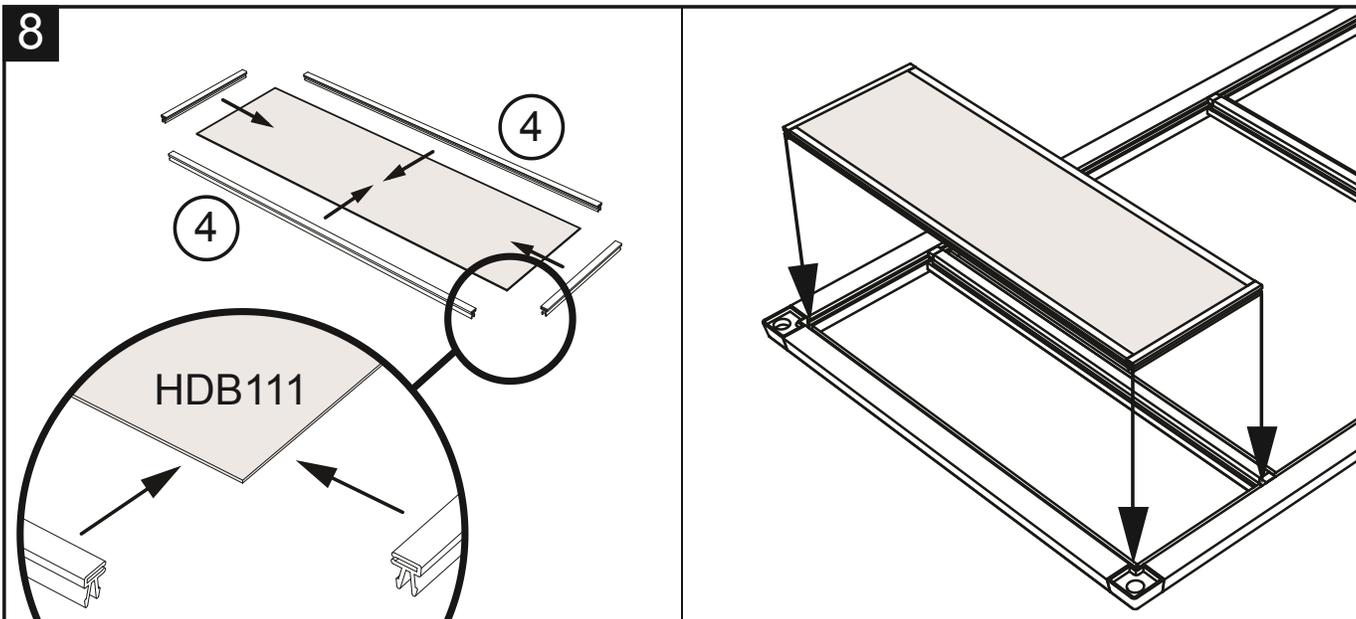


9

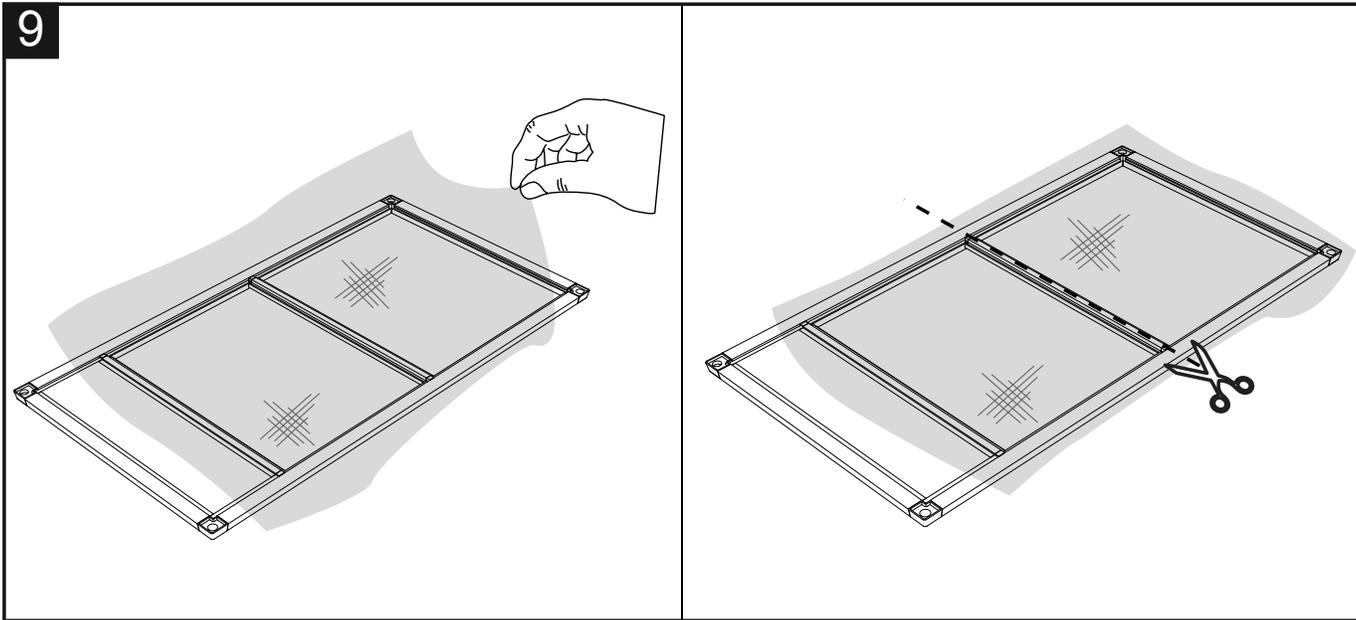


10

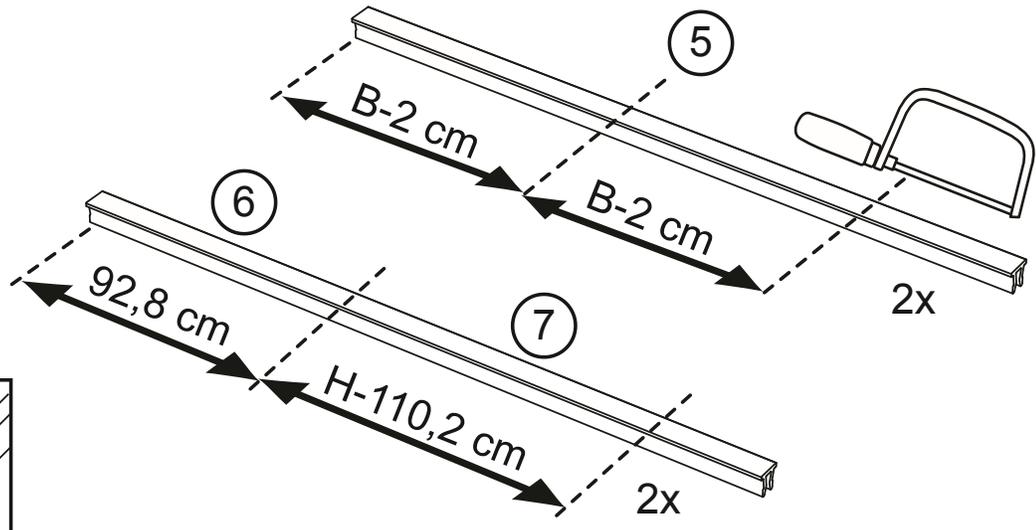


11

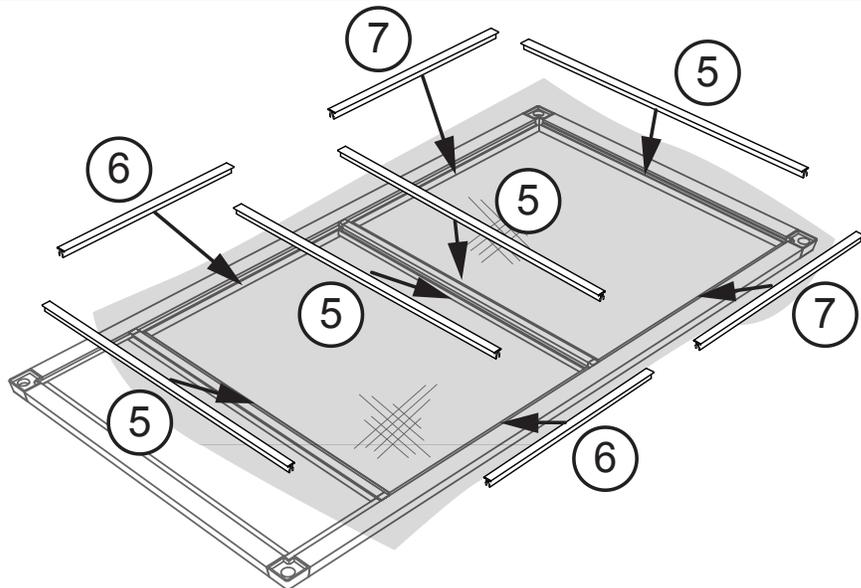


12

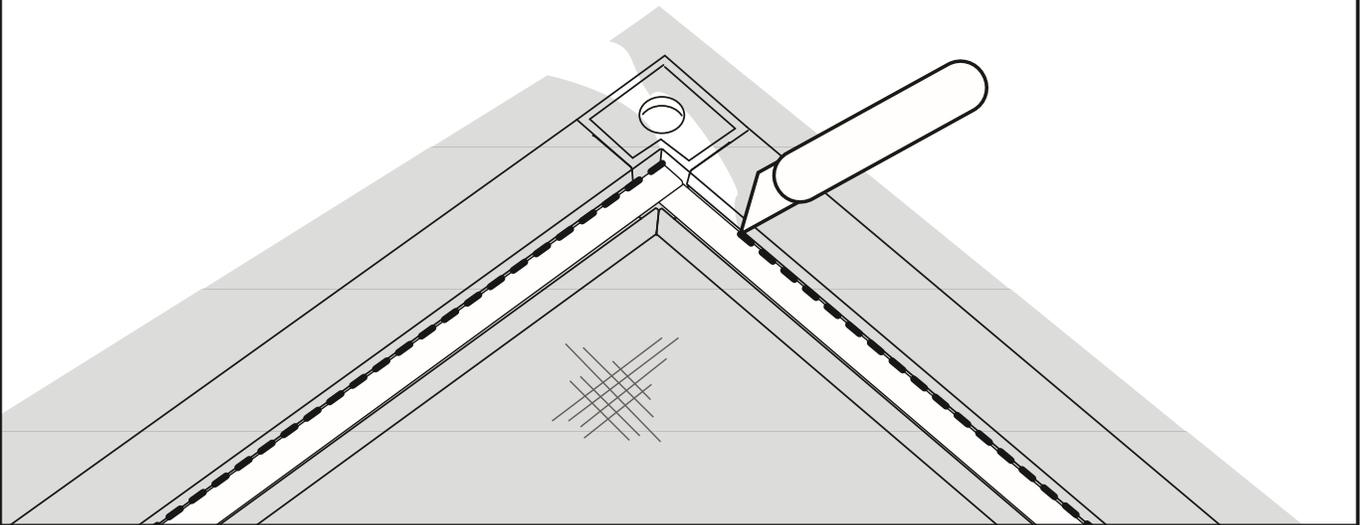


13

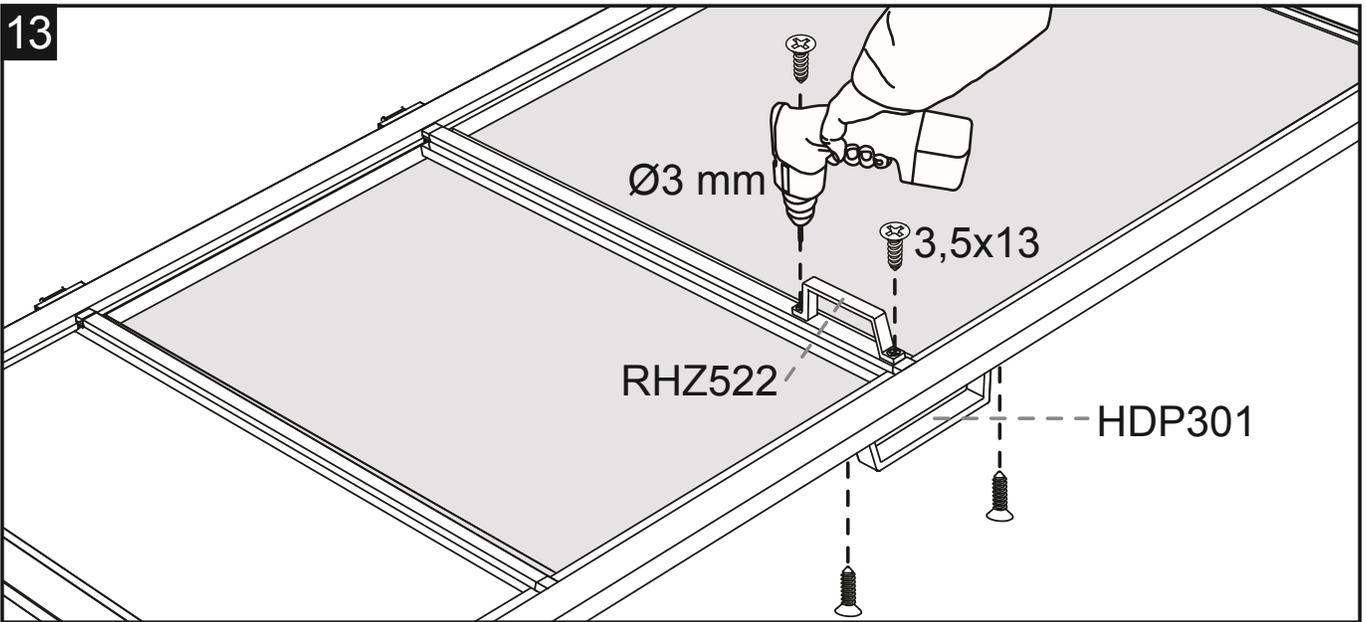

14

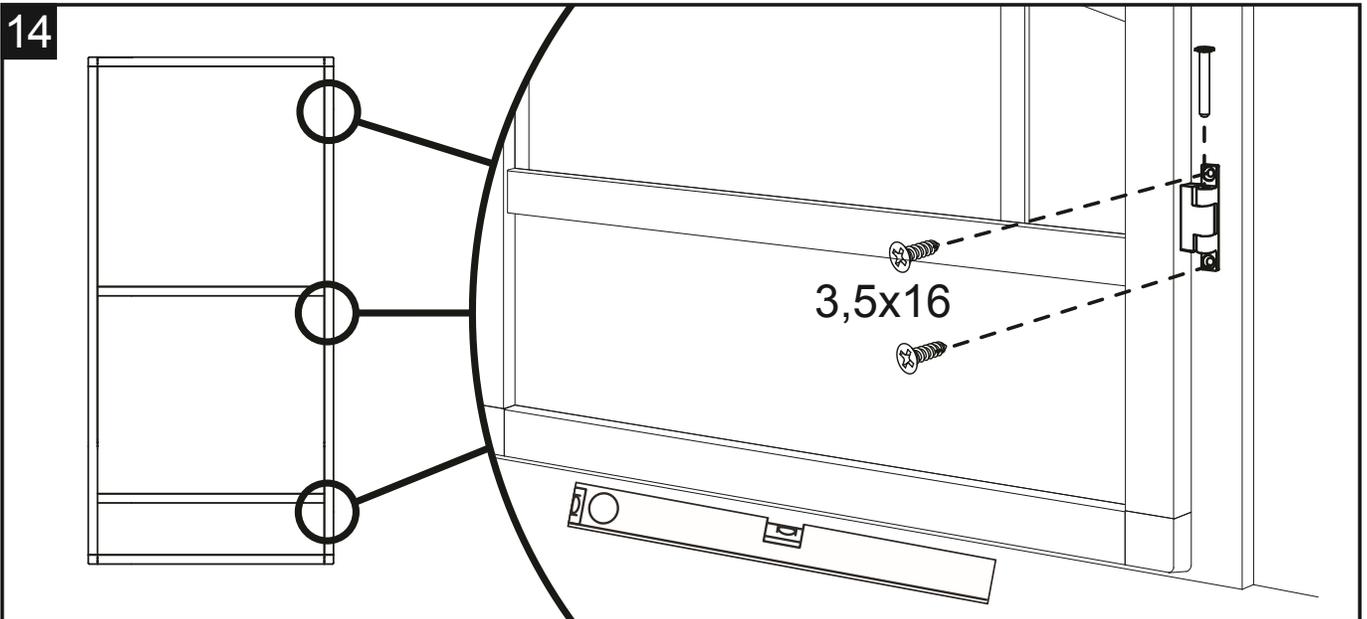

15

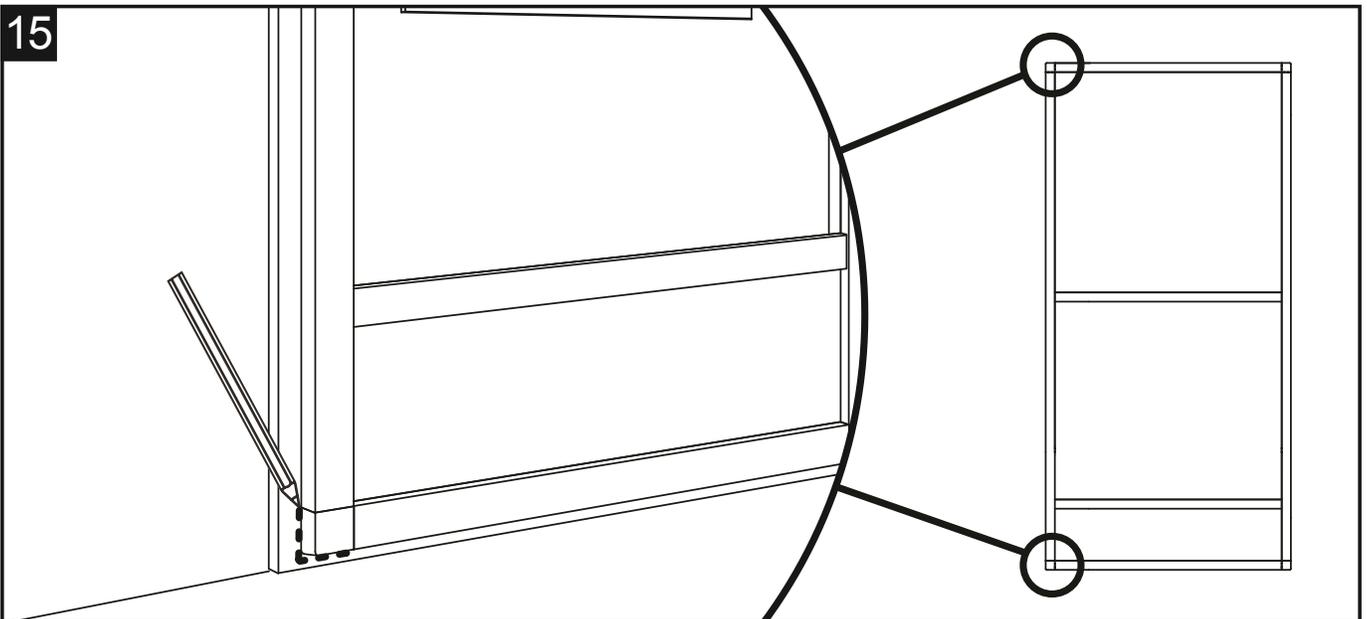

16

